

**Honeywell**

# **VISTA-32FBPT**

***Commercial Fire and Burglary  
Partitioned Security Systems  
with Scheduling***

***User Guide***



## **TABLE OF CONTENTS**

---

|   |  |
|---|--|
| <p>SYSTEM OVERVIEW ..... 5</p> <p>    General ..... 5</p> <p>    A Partitioned System ..... 5</p> <p>    Zones ..... 6</p> <p>    Fire Protection..... 6</p> <p>    Burglary Protection ..... 6</p> <p>    Carbon Monoxide Protection ..... 7</p> <p>    Alarms ..... 7</p> <p>    Memory of Alarm..... 7</p> <p>    Using Schedules ..... 7</p> <p>    Device Timers ..... 8</p> <p>    To Access another Partition (GOTO<br/>    Command) ..... 8</p> <p>    Master Keypad Operation ..... 8</p> <p>    Self-Help Feature ..... 9</p> <p>ABOUT THE KEYPADS ..... 10</p> <p>    General ..... 10</p> <p>    The Alpha Keypad ..... 10</p> <p>FUNCTIONS OF THE KEYPAD ..... 11</p> <p>ENTRY/EXIT DELAYS ..... 15</p> <p>    General Information ..... 15</p> <p>SECURITY CODES AND<br/>AUTHORITY LEVELS ..... 16</p> <p>    General Information ..... 16</p> <p>    Duress Code ..... 16</p> <p>    Quick Arming..... 16</p> <p>    Authority Levels ..... 17</p> <p>    General Rules on Authority Levels and<br/>    Changes..... 18</p> <p>    To Exit User Edit Mode ..... 18</p> <p>    To Add a User..... 19</p> <p>    To Change a User's Code ..... 21</p> <p>    To Delete a User ..... 22</p> <p>ACCESSING OTHER PARTITIONS .... 23</p> <p>    To Access another Partition..... 23</p> <p>    Global Arming ..... 23</p> <p>    Master Keypad Operation ..... 24</p> <p>    Common Lobby Operation..... 26</p> <p>    How User Codes Affect the Common<br/>    Lobby ..... 27</p> | <p>CHECKING FOR OPEN ZONES .....28</p> <p>    Using the [*] READY Key ..... 28</p> <p>DISPLAYING ALL ZONE<br/>DESCRIPTORS .....29</p> <p>    Using the [*] READY Key ..... 29</p> <p>BYPASSING PROTECTION ZONES ...30</p> <p>    Using the [6] BYPASS Key ..... 30</p> <p>    Quick Bypass ..... 30</p> <p>    Displaying Bypassed Zones ..... 31</p> <p>    Group Bypass ..... 31</p> <p>    Zones Remaining Bypassed After<br/>    Disarming ..... 32</p> <p>ARMING PERIMETER ONLY .....33</p> <p>    Using the [3] STAY key ..... 33</p> <p>    Auto-STAY Arming..... 34</p> <p>ARMING PERIMETER ONLY .....35</p> <p>    Using the [7] INSTANT Key ..... 35</p> <p>ARMING ALL PROTECTION.....36</p> <p>    Using the [2] AWAY Key ..... 36</p> <p>ARMING ALL PROTECTION.....37</p> <p>    Using the [4] MAXIMUM Key ..... 37</p> <p>QUICK EXIT .....38</p> <p>    Using the [#] + [9] Keys ..... 38</p> <p>DISARMING AND SILENCING<br/>ALARMS .....39</p> <p>    Using the [1] OFF Key ..... 39</p> <p>    Memory of Alarm..... 39</p> <p>USING THE KEYSWITCH .....40</p> <p>    General ..... 40</p> <p>    Arming..... 40</p> <p>    Disarming..... 40</p> <p>CHIME MODE .....41</p> <p>    Using the [9] Key..... 41</p> |
|---|--|

---

|  |    |                                       |    |
|--|----|---------------------------------------|----|
| VIEWING ALARM COMPANY  |    | Testing Your System .....             | 57 |
| MESSAGES .....   | 42 | FIRE ALARM SYSTEM .....               | 58 |
| General Information .....  | 42 | In Case Of Fire Alarm .....           | 58 |
| PANIC KEYS .....   | 43 | Silencing a Fire Alarm.....           | 58 |
| Using Panic Keys.....  | 43 | Event Display Lock .....              | 59 |
| RELAY CONTROL.....   | 44 | Fire Drill Test (Code + # + 69) ..... | 59 |
| General Information .....  | 44 | TROUBLE CONDITIONS .....              | 60 |
| Executing .....  | 44 | Typical Trouble Displays .....        | 60 |
| USING #70 RELAY MENU MODE .....  | 45 | Power Failure.....                    | 61 |
| General Information .....  | 45 | EMERGENCY EVACUATION .....            | 62 |
| USING SCHEDULES.....   | 46 | MAINTAINING YOUR SYSTEM .....         | 63 |
| Delaying the Closing Time.....   | 46 | Taking Care of Your System .....      | 63 |
| Temporary Open/Close Schedules .....   | 46 | Replacing Batteries in Wireless       |    |
| Programming Temporary Schedules.....   | 47 | Sensors.....                          | 63 |
| PROGRAMMING DEVICE TIMERS.....   | 49 | Silencing Low Battery Warning Tones   |    |
| General Information .....  | 49 | at the Keypad.....                    | 64 |
| Randomize Output Device Times.....   | 51 | Routine Care.....                     | 64 |
| USING #77 INSTANT ACTIVATION   |    | QUICK GUIDE TO FIRE SYSTEM            |    |
| MODE.....  | 52 | FUNCTIONS .....                       | 65 |
| EVENT LOG PROCEDURES .....   | 55 | QUICK GUIDE TO BURGLARY               |    |
| General Information .....  | 55 | SYSTEM FUNCTIONS.....                 | 66 |
| To Display The Event Log .....   | 55 | SUMMARY OF AUDIBLE                    |    |
| TESTING THE SYSTEM (TO BE  |    | NOTIFICATION.....                     | 68 |
| CONDUCTED WEEKLY).....   | 57 | INDEX .....                           | 73 |
| Using the <span style="border: 1px solid black; padding: 0 2px;">5</span> TEST Key ..... | 57 |                                       |    |

# ***System Overview***

---

## **General**

Congratulations on your ownership of a Honeywell partitioned Security System. You've made a wise decision in choosing it, for it represents the latest in security protection technology today. Honeywell is the world's largest manufacturer of security systems and millions of premises are protected by Honeywell systems.

This system offers you three forms of protection: burglary, fire and emergency. To realize the system's full potential, it is important that you feel comfortable in operating it. Your system consists of at least one Keypad which provides full control of system operation, various sensors which provide perimeter and interior burglary protection, plus a selected number of strategically placed smoke or combustion detectors designed to provide early warning in case of fire.

The system uses microcomputer technology to monitor all protection zones and system status and provides appropriate information for display on the Keypad(s) used with the system, and initiates appropriate alarms. Your system may also have been programmed to automatically transmit alarm or status messages over the phone lines to a central alarm monitoring station.

## **A Partitioned System**

Simply stated, a partitioned system shares one physical alarm system among different users, each with their own requirements. For the most part, you as a user need not know about other users and their structure in the system, but from time to time, you may see display messages that indicate the system is in use by another user. Do not be concerned as this is normal. Refer to the ACCESSING OTHER PARTITIONS section for additional information.

## ***System Overview (cont'd)***

---

### **Zones**

Your system's sensing devices have been assigned to various "zones." For example, the sensing device on your Entry/Exit door may have been assigned to zone 001, sensing devices on windows in the master bedroom to zone 002, and so on. These numbers will appear on the display, along with an alpha descriptor for that zone (if programmed), when an alarm or trouble condition occurs.

### **Fire Protection**

The fire protection portion of your security system (if used) is always on and will sound an alarm if a fire condition is detected. Refer to the *Fire Alarm System* section for important information concerning fire protection, smoke detectors and planning emergency exit routes from your facility.

### **Burglary Protection**

The burglary protection portion of your system must be turned on or "armed" before it will sense burglary alarm conditions. Your system provides four modes of burglary protection: STAY, AWAY, INSTANT and MAXIMUM, and even allows you to BYPASS selected zones of protection while leaving the rest of the system armed. The system also provides a CHIME mode, for alerting users to the opening and closing of doors and windows while the system is disarmed. Refer to the other sections of this manual for procedures for using these features.

The following table lists the four different arming modes and the results of each.

| <b>Arming Mode</b> | <b>Features For Each Arming Mode</b> |             |                 |
|--------------------|--------------------------------------|-------------|-----------------|
|                    | Exit Delay                           | Entry Delay | Perimeter Armed |
| AWAY               | Yes                                  | Yes         | Yes             |
| STAY*              | Yes                                  | Yes         | Yes             |
| INSTANT*           | Yes                                  | No          | Yes             |
| MAXIMUM            | Yes                                  | No          | Yes             |

\*The system provides three different STAY and INSTANT arming modes. See ARMING IN THE STAY MODES and ARMING IN THE INSTANT MODES sections for details on these modes.

## ***System Overview (cont'd)***

---

### **Carbon Monoxide Protection**

Carbon monoxide (CO) protection is available with your system using the 5800CO Carbon Monoxide Detector. The 5800CO is a 3V battery powered wireless Carbon Monoxide Detector used with wireless alarm systems that support 5800 series devices. Carbon monoxide gas is a highly poisonous gas which is released when fuels are burned. It is invisible, has no smell and is therefore impossible to detect with the human senses. We strongly suggest installing Carbon monoxide protection with your system.

### **Alarms**

When an alarm occurs, both the keypad and external sounders will sound, and the keypad will display the zone(s) causing the alarm. If your system is connected to a central monitoring station, an alarm message will also be sent. To stop the alarm sounding, simply disarm the system.

### **Memory of Alarm**

When an alarm condition occurs, the keypad displays the number(s) of the zone(s) that caused the problem, and displays the type of alarm (ex. FIRE, ALARM). It remains displayed until it is cleared by disarming the system (see *Disarming the System* section).

### **Using Schedules**

Your system may have been programmed with schedules for automatically arming, disarming and activating various devices and/or performing other system functions at predetermined times. Users can modify some of these schedules by manually delaying a closing time, using temporary schedules, or by programming special user schedules. Refer to the *Using Schedules* section at the end of this manual for scheduling related procedures.

## ***System Overview (cont'd)***

---

### **Device Timers**

The system provides up to 20 "timers" that can be used to control various devices, such as lights or appliances. These timers are similar in concept to the individual appliance timers that might be purchased at a department store. The devices that can be controlled are programmed into the system by the installer. Up to 96 of these devices can be programmed. Refer to the *Programming Device Timers* section for procedures.

### **To Access another Partition (GOTO Command)**

Each keypad is assigned a default partition for display purposes, and will show only that partition's information. But, if the user is authorized, a keypad in one partition can be used to perform system functions in another partition, by using the GOTO command. Note that only those partitions authorized and programmed by the installer can be accessed in this manner.

To GOTO another partition, enter your security code, then press [\*] followed by the desired partition number (1-2).

The keypad will remain in the new partition until directed to go to another partition, or until 2 minutes has elapsed with no keypad activity. Entering your security code, pressing [\*] followed by [0] will return the keypad to its original partition.

### **Master Keypad Operation**

A "Master" keypad is one on which the status of all eight partitions is displayed simultaneously. A user can get more information about a certain partition by simply entering [\*] + the desired partition number (1-2). To log on to the "Master" partition (3) using the GOTO command, and to perform any functions at a Master keypad, a user must have access to all partitions.



## ***System Overview (cont'd)***

---

### **Self-Help Feature**

Abbreviated user instructions are built into the system that can be easily viewed on the alpha keypad's message display screen. This feature will prove particularly useful if this manual is not conveniently accessible when you need to perform a system procedure with which you are not familiar.

#### **To view the abbreviated instructions:**

Simply press and hold down the function key of interest until the description starts to appear (about 5 seconds) and then release it. The system must be "READY TO ARM" to perform this function.

Refer to the *Functions of the Keypad* section for descriptions of each key function.

# About The Keypads

---

## General

**IMPORTANT:** If the keypad beeps rapidly upon entering the premises, it indicates that an alarm has occurred during your absence. LEAVE the premises IMMEDIATELY and CONTACT THE POLICE from a safe location nearby.

Your keypads allow you to control all system functions. The keypads feature a telephone style (digital) keypad and a Liquid Crystal Display (LCD) that shows the nature and location of all occurrences. Keypad display back lighting is programmable to always stay on or to light only when a key is pressed, then turn off a few minutes later.


The keypads also feature a built-in sounder that will sound during alarms and troubles. It will also "beep" during certain system functions, such as during entry/exit delay times, during CHIME mode, and when depressing keys to perform system functions (to acknowledge the key press). These sounds can be optionally suppressed in some of your keypads (so as not to disturb other users of the system). Ask your installer if this has been done.

## The Alpha Keypad

Alpha keypads feature a 2-line, 32-character alphanumeric LCD that can display system messages in user-friendly English. Abbreviated user instructions can also be displayed (see Self Help paragraph in the SYSTEM OVERVIEW section). These keypads can also be programmed with custom zone descriptors.

**NOTE:** There may be multiple keypads on your system. One, the primary keypad, will continue to operate under faulted conditions.

## Functions of the Keypad

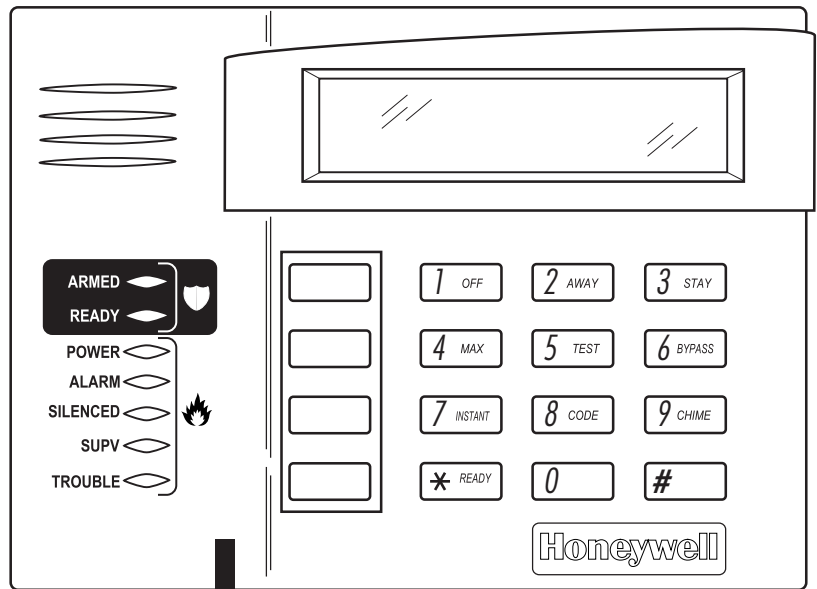


### Primary Fire Keypad 6160CR-2

**IMPORTANT!** When using the keypad to enter codes and commands, sequential key depressions must be made within 3 seconds of one another. If 3 seconds elapse without a key depression, the entry is aborted and must be repeated from its beginning.

## Functions of the Keypad (cont'd)

---

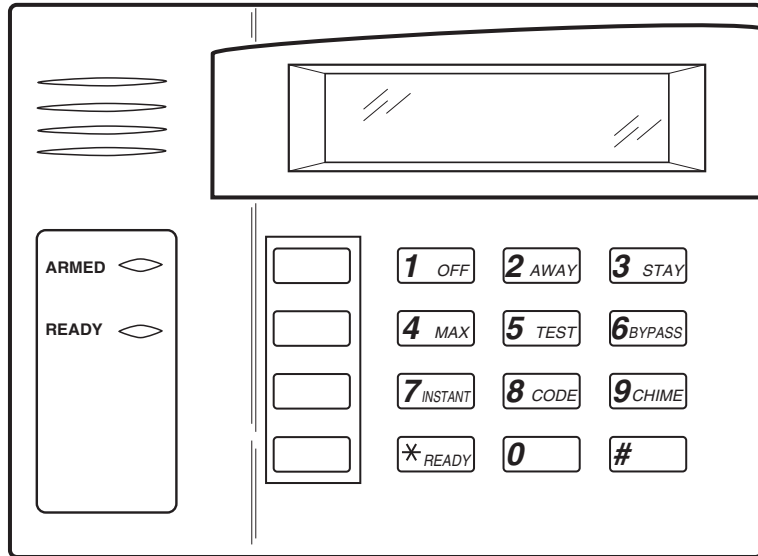

**Burglary Keypad 6160**

**IMPORTANT!** When using the keypad to enter codes and commands, sequential key depressions must be made within 3 seconds of one another. If 3 seconds elapse without a key depression, the entry is aborted and must be repeated from its beginning.

## ***Functions of the Keypad (cont'd)***

---

**ALPHA DISPLAY WINDOW:** A 2-line, 32-character Liquid Crystal Display (LCD). Displays protection point identification and system status, messages, and user instructions.

**1 OFF** : Disarms the burglary portion of the system, silences alarms and audible trouble indicators, and clears visual alarm trouble after the problem has been corrected.

**2 AWAY** : Completely arms both perimeter and interior burglary protection by sensing an intruder's movements through protected interior areas as well as guarding protected doors, windows, etc. Late arrivals can enter through an entry delay zone without causing an alarm if the system is disarmed before the entry delay time expires.

**3 STAY** : Arms the perimeter burglary protection, guarding protected doors, windows and other perimeter protection points, and sounds an alarm if one is opened. Allows automatic bypassing of certain areas, which allows movement within your house without causing an alarm. Late arrivals can enter through an entry delay zone without causing an alarm if the system is disarmed before the entry delay time expires. See *ARMING PERIMETER ONLY* for a full explanation of the STAY key.

**4 MAX** : Arms in manner similar to AWAY mode, but eliminates the entry delay period, thus providing maximum protection. An alarm will occur immediately upon opening any protection point, including entry delay zones.

**5 TEST** : Tests the system and alarm sounder if disarmed.

**6 BYPASS** : Removes individual protection zones from being monitored by the system. Displays previously bypassed protection zones.

**7 INSTANT** : Arms in manner similar to STAY mode, but turns off the entry delay period, offering greater security while inside and not expecting any late arrivals. An alarm will occur immediately upon opening any perimeter protection point, including entry delay zones.

**8 CODE** : Allows the entry of additional user codes that can be given to other users of the system.

**9 CHIME** : Turns on and off the CHIME mode. When on, any entry through a protected delay or perimeter zone while the system is disarmed will cause a tone to sound at the Keypad(s).

## ***Functions of the Keypad (cont'd)***

---

**\* READY** : When depressed prior to arming the system, the keypad will display all open protection zones within the keypad's home partition. This key is also used to display all zone descriptors that have been programmed for your system, by holding the key down for at least 5 seconds.

**#** : Permits ARMING of the system without use of a security code ("Quick Arm", if programmed).

**KEYS 0-9:** Used to enter your individual security access code(s).

**LED READY INDICATOR:** (GREEN) Lit indicates system is ready to be armed, while unlit indicates system not ready.

**LED ARMED INDICATOR:** (RED) Lit when the system has been armed (STAY, AWAY, INSTANT or MAXIMUM).

**LED POWER INDICATOR:** (GREEN) Lit when AC power is applied to the system.

**LED ALARM INDICATOR:** (RED) Lit when any Fire Alarm exists in the system.

**LED SILENCED INDICATOR:** (AMBER) Lit when CODE + OFF is pressed.

**LED SUPV INDICATOR:** (AMBER) Lit when a supervisory condition exists in the system.

**LED TROUBLE INDICATOR:** (AMBER) Lit when a trouble condition exists in the system.

**SPEAKER:** Source of audible internal warning and confirmation sounds, as well as alarms (see "Summary of Audible Notifications").

**FUNCTION KEYS:** These keys can be used for panic keys. Refer to the *Panic Keys* section for descriptions of these functions.

## ***Entry/Exit Delays***

---

### **General Information**

Your system has installer-programmed time delays, known as exit delay and entry delay. Whenever you arm your system, **exit delay** gives you time to leave through the designated exit door without setting off an alarm. Exit delay begins immediately after entering any arming command, and applies to all modes of arming protection. If programmed, a slow beeping will sound throughout the exit delay period.

**Entry Delay** gives you time to disarm the system when you reenter through the designated entrance door. But the system must be disarmed before the entry delay period ends, or an alarm will occur. The keypad will beep during the entry delay period, reminding you to disarm the system. You can also arm the system with no entry delay at all by using either INSTANT or MAXIMUM arming modes. These modes provide greater security while on the premises or while away for extended periods of time. See your installer for your delay times.

# ***Security Codes and Authority Levels***

---

## **General Information**

At the time of installation, you were assigned an authority level and a personal 4-digit security code, known only to you and yours. The security code must be entered when arming and disarming the system. The authority level defines the system functions that you can perform.

As an additional safety feature, other users that do not have a need to know your code can be assigned different security codes, and each user can be given a different authority level. Users are identified by "user numbers", which are assigned when assigning a user's security code.

All codes can be used interchangeably when performing system functions within the limits of each code's authority level (a system armed with one user's code can be disarmed by another user's code), with the exception of the Operator Level C code. See *Authority Levels* paragraph on the following page for details regarding authority levels.

## **Duress Code**

This feature is intended for use if you are forced to disarm or arm the system under threat. When used, the system will act normally, but can silently notify the central station of your situation, if that service has been provided. The duress code is pre-assigned by the installer during installation (authority level 6).

**IMPORTANT:** This code is useful only when the system is connected to a central station.

## **Quick Arming**

Note: If "Quick Arming" was programmed by the installer, the [#] key can be pressed in place of the security code when arming the system. The security code must always be used to disarm the system, however.



## ***Security Codes and Authority Levels (cont'd)***

---

### **Authority Levels**

Authority levels define the system functions a particular user can perform. Depending on the authority assigned to you, there are certain system functions you may be prohibited from performing. In summary, there are six authority levels, each having certain system restrictions as shown below.

**Level 1 Master:** Can perform all system functions in assigned partitions, and can add, delete or change Manager and Operator level users. The Installer adds master codes.

**Level 2 Manager:** Can perform system functions in assigned partitions, and can add, delete or change Operator level users.

**Level 3 Operator A:** Can perform system functions in assigned partitions, but cannot add or delete other users.

**Level 4 Operator B:** Same as Operator A, except Operator B cannot bypass zones of protection.

**Level 5 Operator C:** Can arm the system in assigned partitions, but cannot disarm the system unless the system was armed with this code. This code is typically assigned to someone who has a need to arm/disarm the system only at certain times (such as a baby-sitter).

**Level 6 Duress:** Can arm and disarm the system, but also sends a silent panic alarm to the central station, if that service is connected.

#### **To view your authority level and system capabilities:**

1. Enter your code + [\*] + [\*].
2. The keypad will display the partition(s) that you are authorized to operate, and your user number and authority level in each partition.

## ***Security Codes and Authority Levels (cont'd)***

---

### **General Rules on Authority Levels and Changes**

- A user may not delete or change the user code of the SAME or HIGHER authority than which he is assigned.
- A user may only ADD users to a LOWER authority level.
- A user may assign access codes only to those partitions to which the user adding the code has access. (Ex. a user with access to only partition 1 cannot assign codes in partition 2.)
- The only way to assign a user's authority level is by using the "Add A User" procedure. To change a user's authority level, that user must first be deleted, and then added again.
- A user can only be DELETED or CHANGED from within the partition he is assigned.
- User numbers must be entered as 2-digit entries. Single digit user numbers must be preceded by a "0" (example, 03, 04, etc.). Security codes are entered as 4-digit numbers.
- Before assigning a security code, be sure it does not conflict with any DURESS code.

**NOTE:** When adding, changing or deleting users, all other alpha keypads in that partition will display "User Edit Mode – Please Stand By", and key depressions (except Panic) at those keypads will be ignored. Panic key depressions will cause an alarm and terminate user entry.

### **To Exit User Edit Mode**

You can exit any of the user edit modes described on the following pages at any time by doing the following:

1. Press either \* or # , or don't press any key for 10 seconds.
2. System returns to normal mode.

## ***Security Codes and Authority Levels (cont'd)***

---

### **To Add a User**

**IMPORTANT:** Temporary users should not be shown how to use any system function they do not need to know (e.g. bypassing protection zones).

#### **CODE**

1. Enter Master or Manager code and press the  key.
2. Enter the new user's 2-digit User Number (02-75).
3. Enter 4-digit security code for that user. The following prompts will appear.

ADD NEW USER?  
0 = NO , 1 = YES

Enter 1 to add a new user code. Entering 0 will change the existing user's code to the code entered in step 3. See Changing A User's Code section.

USER NUMBER = 03  
ENTER AUTH. LEVEL

Enter the authority level, 1-6, for this user within this partition.

1=master            2=manager        3=operator A  
4=operator B       5=operator C       6=duress code

GROUP BYPASSING?  
0 = NO , 1 = YES

Enter 1 (YES) to allow this user to perform group bypasses. Enter 0 (NO) this user will not be able to perform group bypasses.

ACCESS GROUP?  
ENTER 0-8

If access schedules have been programmed, this prompt appears. Enter the user's access group number (1-8) if this user should have limited access to the system. Enter 0 if no access group should be assigned.

RF BUTTON ?  
0 = NO , 1 = YES

This prompt will appear if a 5800 series button transmitter has been supplied and has not yet been assigned to a user.

Press 1 if a button transmitter will be assigned to this user. Otherwise press 0. Not used in Commercial Burg and Commercial Fire.

## ***Security Codes and Authority Levels (cont'd)***

---

MULTI-ACCESS ?  
0 = NO , 1 = YES

If you as a user have access to other partitions, the keypad will prompt for ability of this new user to access (GOTO) those partitions. Press 0 (NO) or 1 (YES). If no, the system activates this user code and exits "Add a User" mode. If yes, the keypad prompts for the Global Arm option for this user.

GLOBAL ARM ?  
0 = NO , 1 = YES

Press 1 (YES) if this user will be allowed to try to arm more than one partition at the same time. Press 0 if this user will arm only his assigned partition.

PART.2 - SHOP?  
0 = NO , 1 = YES

The keypad now prompts for the user's access to the next partition (see GOTO command). Again press 0 or 1. If yes, the system will automatically assign a user number for use in that partition and will prompt for authority level and global arm options for this user within the partition (see previous steps).

PART. 1 A0\* WHSE  
USER 03 AUTH=3G.

When all partitions have been displayed, the keypad will scroll through the partition(s) to which access has been assigned, and will display the user number, authority level and global arm option for each. The "G" after the authority level indicates that the global arm feature is active for this user in the displayed partition. The "\*" indicates the partition from which this user can be changed or deleted. The "." at the end of the second line indicates that this user sends open/close reports. Open/close reporting is automatically active for any users added by you, if you have open/close reporting active.

## ***Security Codes and Authority Levels (cont'd)***

---

### **To Change a User's Code**

1. Enter Master or Manager code and press the CODE 8 key + user number to be changed.
2. Enter the new code for that user.

ADD NEW USER?  
0 = NO , 1 = YES

The system will recognize that the user number is already in use and will prompt whether or not this is a new user. Enter 0 to change the existing user's code to the code entered in step 3.

USER 02 CHANGED  
SUCCESSFULLY

The system will confirm that the change is allowed based on authorization level, and if so, will put the new code into effect.

**Note that if changing one's own code,** the system will prompt for the new code to be re-entered. This prevents accidentally changing one's own code.

## ***Security Codes and Authority Levels (cont'd)***

---

### **To Delete a User**

1. Enter Master or Manager code and press the CODE 8 key + user number to be deleted.
2. Enter Master or Manager code first entered.

OK TO DELETE  
0 = NO , 1 = YES

The system will recognize that the User number is already in use and will prompt to confirm that it should be deleted. Press 0 (NO) or 1 (YES).

USER CODE  
DELETED

If yes, that user's code will be removed from all partitions to which it was assigned, and all authorization levels and other information about that user will be deleted. Note that a user can only be deleted from the partition in which it was first assigned, and can only be deleted by a user with a higher authority level. A User's security code cannot be deleted by oneself.

# Accessing Other Partitions

---

## To Access another Partition

Each keypad is assigned a default partition for display purposes, and will show only that partition's information. But, if the user is authorized, a keypad in one partition can be used to perform system functions in other partitions by using the **GOTO** command. Note that only those partitions authorized and programmed by the installer can be accessed in this manner.

### To GOTO another partition:

1. Enter your security code, then press **READY**  + partition number (0-2).

Entering partition number 0 will return the keypad to its original partition.

2.  The keypad will remain in the new partition until directed to go to another partition, or until 2 minutes have elapsed with no keypad activity.

AAAA = alpha descriptor programmed by the installer

X = partition number

## Global Arming

The Global Arming option may be assigned for use by some users. If Global Arming was enabled for use with your security code, a keypad prompt (message) shown below appears after pressing one of the arming function keys (STAY, INSTANT, AWAY, MAXIMUM, OFF).

The prompt displays all the partitions. The user may only arm/disarm the partitions they are assigned access to.

To select the partition(s) that are to be armed, enter the desired number 1-2. An "X" will appear under that partition. Entering a partition's number again will delete the "X" and that partition will not arm when this prompt is exited.

Pressing 0 will turn all partitions the user is assigned access to on/off.

When completed, press \* to exit. All the partitions with the "X" will then arm/disarm.

## Accessing Other Partitions (cont'd)

---

### Global Arming Notes:

- When performing a Global Arm, if there are faults in any of the selected partitions, the system will enter a Summary Mode. Faulted zones in all the selected partitions will be displayed. These faults must be corrected or bypassed. This Summary Mode will end in approximately 2 minutes if no keys are pressed.
- When performing a Global Disarm, if any of the selected partitions has a condition that would cause the keypad to beep (e.g., alarm memory or a trouble condition), the system enters a Summary Mode and displays the condition. This Summary Mode will end in approximately 2 minutes if no keys are pressed.

### Master Keypad Operation

A "Master" keypad is one that reflects the status of the entire system (Partitions 1-2) on its display. This is useful because it eliminates the need for a security officer in a building to have to "log-on" to various partitions from one partition's keypad to find out where an alarm has occurred.

A description of a typical display follows:

|        |     |
|--------|-----|
| SYSTEM | 1 2 |
| STATUS | RR  |

The status of each partition is directly below the partition number on the display. Possible status indications include:

|                           |                             |                               |
|---------------------------|-----------------------------|-------------------------------|
| <b>A</b> = Armed Away     | <b>S</b> = Armed Stay       | <b>M</b> = Armed Maximum      |
| <b>I</b> = Armed Instant  | <b>R</b> = Ready            | <b>N</b> = Not Ready          |
| <b>B</b> = Bypassed/Ready | <b>*</b> = Alarm            | <b>T</b> = Trouble            |
| <b>F</b> = Fire Alarm     | <b>P</b> = AC Power Failure | <b>L</b> = Low System Battery |
| <b>C</b> = Comm Fail      |                             |                               |

To obtain more information regarding a particular partition, enter [\*] + [Partition No.] (i.e., \*2). This will allow viewing *only* of that partition. In order to affect that partition, the user must log on with a code that has access to that partition. Also, in order for a user of any partition to log onto the "Master" partition (Partition 3) to view the status of *all* partitions, and to perform any functions at the Master keypad, that user must have access to all partitions. Otherwise, access will be denied.



## ***Accessing Other Partitions (cont'd)***

---

The following is an example of what would be displayed for a fault condition on Zone 002 (Loading Dock Window) on Partition 1 (Warehouse) when logging on from a keypad on Partition 3:

WHSE DISARMED  
HIT \* FOR FAULTS

This is the normal display that appears at Partition 1's keypad(s). Pressing \* will display:

FAULT 002 LOADING  
DOCK WINDOW

Additional zone faults will be displayed one at a time. To display a new partition's status, press \* + [Partition No.]. This will display the status of the new partition.

The "Armed" LED on a Master keypad will be lit only if *all* partitions have been armed successfully. The "Ready" LED will be lit only if *all* partitions are "ready to arm."

The sounder on a Master keypad will reflect the sound of the most critical condition on all of the partitions. The priority of the sounds is as follows:

- A. Pulsing fire alarm sounds
- B. Steady burglar alarm sounds
- C. Trouble sounds

The sounder may be silenced by pressing any key on the Master keypad.

## Accessing Other Partitions (cont'd)

---

### Common Lobby Operation

When an installation consists of a partition that is shared by users of other partitions in a building, the shared partition may be assigned as a “common lobby” partition for the system. An example of this might be in a medical building where there are two doctors and a common entrance area.

This option employs logic for automatic arming and disarming of the common lobby. Partitions may be set to affect and/or attempt to arm the common lobby. This will affect the way the lobby will react when arming or disarming activity occurs in another partition.

Partitions that **affect** the lobby will cause the following to occur:

- a. When the first partition that affects the lobby is disarmed, the lobby will also be disarmed.
- b. The common lobby cannot be armed unless every partition selected to affect the lobby is armed.
- c. Arming the last partition that affects the lobby **will not** automatically attempt to arm the lobby.

Partitions set to **arm** the lobby will cause the following to occur:

- a. Arming any partition programmed to arm the lobby will automatically attempt to arm the lobby. If any faults exist in the lobby partition, or another partition that affects the lobby is disarmed, the lobby cannot be armed, and the message “UNABLE TO ARM LOBBY PARTITION” will be displayed.

The following chart summarizes how the common lobby partition will operate:

| Partition Affects Lobby | Partition Arms Lobby | Disarms When Partition Disarms | Attempts to Arm When Partition Arms | Can Be Armed if Other Partitions Disarmed |
|-------------------------|----------------------|--------------------------------|-------------------------------------|---|
| NO                      | NO                   | NO                             | NO                                  | YES                                       |
| YES                     | NO                   | YES                            | NO                                  | NO  |
| YES                     | YES                  | YES                            | YES                                 | NO  |
| NO                      | YES                  | ---ENTRY NOT ALLOWED---        |                                     |   |

## ***Accessing Other Partitions (cont'd)***

---

### **How User Codes Affect the Common Lobby**

#### **Codes with “Global” Arming**

If your code is given “global arming” when it is defined, the system displays a prompt that allows you to pick and choose the partitions to be armed or disarmed. This eliminates the “automatic” operation of the lobby. Keep in mind, however, that if attempting to arm all the partitions you have access to, and another affecting partition is disarmed, (one you do not have access to) you will not be able to arm the lobby, and the message “UNABLE TO ARM LOBBY PARTITON” will be displayed.

#### **Codes with “Non-Global” Arming**

If arming with a non-global code, the lobby partition operation will be automatic, as described in the previous table.

#### **Other Methods of Arming/Disarming**

When arming or disarming a partition that affects and/or arms the common lobby in one of the following manners, lobby logic remains active:

- Quick-Arm
- Keyswitch
- Wireless Button
- Wireless Keypad

# Checking For Open Zones

---


## Using the **READY** Key

Before arming your system, all protected doors, windows and other protection zones must be closed or bypassed (see BYPASSING section). Otherwise the keypad will display a "Not Ready" message. Using the \* **READY** key will display all zones that are faulted, making it easier for you to secure any open zones.

### To show faulted zones:


DISARMED - PRESS  
\* TO SHOW FAULTS

**NOTE:** Some keypads light a green LED when the system is ready. If not lit, the system is not ready to be armed.

1. Do not enter security code, but simply press  **READY** .

FAULT 005 FRONT  
UPSTAIRS BEDROOM

Typical fault display

2.  **DISARMED**  
**READY TO ARM** Secure or bypass the zones displayed before arming the system. The "Ready" message will be displayed<sup>†</sup> when all protection zones have been either closed or bypassed.

<sup>†</sup> **NOTE:** All or part of this message may be replaced by a customized message programmed by the installer. Bear this in mind whenever the instructions indicate that the "DISARMED" or "READY" message will be displayed.

## ***Displaying All Zone Descriptors***

---

### **Using the READY Key**

The Alpha Keypads can also display all the zone descriptors that are programmed in your system. The abbreviated instructions for the **READY** key will appear first, followed by the zone descriptors. Displaying all descriptors is useful when you need to know the zone number of a particular zone, as when bypassing zones.

**The "Disarmed-Ready to arm" message must be displayed before zone descriptors can be displayed.**

Press the  <sup>READY</sup> key and hold down for at least 5 seconds.

# Bypassing Protection Zones

---

## Using the **6** BYPASS Key

This key is used when you want to arm your system with one or more zones intentionally unprotected. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed. All bypasses are removed when an OFF sequence (security code plus OFF) is performed. Bypasses are also removed if the arming procedure that follows the bypass command is not successful.

**NOTE: The system will not allow fire or emergency zones to be bypassed.**

**To bypass zones, the system must be disarmed first.**

### BYPASS

1. Enter your security code and press **6**.
2. Enter zone number(s) for the zones to be bypassed (e.g., 001, 002, 003, etc.).  
**IMPORTANT!** All single-digit numbers must be preceded by "00" (for example, enter 001 for zone 1).
3. Press [\*] + [\*].

4. 

|                                      |
|--------------------------------------|
| BYPASS 007 FRONT<br>UPSTAIRS BEDROOM |
|--------------------------------------|

  
*Typical bypass message*  
When finished, the keypad will display the word BYPASS along with each bypassed zone number. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.

5. 

|                                 |
|---------------------------------|
| DISARMED BYPASS<br>READY TO ARM |
|---------------------------------|

  
Arm the system as usual when the keypad displays "ready" to arm message.

## Quick Bypass

Your system allows you to easily bypass all open (faulted) zones without having to enter zone numbers individually.

**Note:** All bypasses are removed when an OFF sequence (security code plus OFF) is performed

**To use the Quick Bypass feature:**

### BYPASS

1. Enter your security code and press **6** then press **#**.

## ***Bypassing Protection Zones (cont'd)***

---

2. 

|                                      |
|--------------------------------------|
| BYPASS 007 FRONT<br>UPSTAIRS BEDROOM |
|--------------------------------------|

*Typical bypass message*

In a few moments, all open zones will be displayed along with the word BYPASS. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.
3. 

|                                 |
|---------------------------------|
| DISARMED BYPASS<br>READY TO ARM |
|---------------------------------|

Arm the system as usual when the keypad displays the "ready" to arm message. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.

### **Displaying Bypassed Zones**

The system allows you to view bypassed zones that are presently bypassed regardless of the status of the partition (armed, disarmed, etc.). To view bypassed zones.

1. Enter your security code + # + 84.
2. All zones presently bypassed are automatically scrolled for display.

### **Group Bypass**

Your system allows you to easily bypass a group of zones without having to enter zone numbers individually. The system provides up to 15 groups. There is no limit to the number of zones that may be assigned to any one group. Check with your installer for a list of zones assigned to the group(s).

#### **NOTES:**

All bypasses are removed when an OFF sequence (security code plus OFF) is performed.

Users must be assigned the following attributes to perform the group bypass function:

- Enabled for group bypassing
- Access to the partition(s) containing the zones being bypassed
- Global arming capability.

#### **To use the Group Bypass feature:**

1. Enter your security code and press **BYPASS**

|   |
|---|
| 6 |
|---|

 then press 

|   |
|---|
| * |
|---|

 then enter the group number (01-15).

## ***Bypassing Protection Zones (cont'd)***

---

2. 

|                                      |
|--------------------------------------|
| BYPASS 007 FRONT<br>UPSTAIRS BEDROOM |
|--------------------------------------|

*Typical bypass message*

In a few moments, all the zones in the group will be displayed along with the word BYPASS. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.
3. 

|                                 |
|---------------------------------|
| DISARMED BYPASS<br>READY TO ARM |
|---------------------------------|

Arm the system as usual when the keypad displays the "ready" to arm message. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.

### **Zones Remaining Bypassed After Disarming**

The system provides an option to allow all manually bypassed zones to remain bypassed upon disarming (security code + OFF) of the partition. This option must be programmed by your installer. Check with your installer to see if this option has been enabled.

#### **NOTES:**

For each partition in which the option is enabled, the security code + OFF will no longer unby pass zones. To unby pass ALL zones you must enter your security code + # + 64. To unby pass zones INDIVIDUALLY, you must enter your security code + 6 + zone number.

Any zone that was automatically bypassed by the system will be unby passed upon disarming the system (e.g. STAY mode, Auto-STAY, etc.).

Vent zones and zones bypassed by a programmed Auto-Bypass schedule (Time Driven Event) are considered "manual bypasses" and will not be unby passed upon disarming the system.

Zones that were in a bypassed state at the time a System Shutdown is sent from the Compass Downloading software will be unby passed when the System Shutdown is removed.



## Arming Perimeter Only

(With Entry Delay ON)

---

### Using the **3** STAY key

Use this key when you are staying home, but might expect someone to use the entrance door later.

When armed in STAY mode, the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. Late arrivals can enter through the entrance door without causing an alarm, but they must disarm the system within the entry delay period or an alarm will occur.

The system provides three STAY modes. STAY mode 1, 2, and 3. When activated, STAY modes 1 and 2 automatically bypass specific zones assigned by your installer to each of the STAY modes. STAY mode 3, when activated, automatically bypasses all zones assigned to STAY modes 1 AND 2. Check with your installer for a list of the zones that are bypassed during each STAY mode.

**Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)**

1. Enter your security code and press **STAY** **3** + **1** for STAY Mode 1.  
Enter your security code and press **3** + **2** for STAY Mode 2.  
Enter your security code and press **3** + **3** for STAY Mode 3.

**NOTE:** If none of the zones in a partition are assigned to Stay mode 2, then when the user enters **[User Code] + [3]** (STAY), all zones assigned to Stay mode 1 are automatically bypassed.

2. 

|                                   |
|-----------------------------------|
| ARMED ***STAY 1*<br>ZONE BYPASSED |
|-----------------------------------|

 The keypad beeps three times, displays the armed message, and indicates which STAY mode (1, 2 or 3).  
**NOTE:** "ZONE BYPASSED" in this display simply indicates that some zones of protection are not armed when using STAY mode.

# ***Arming Perimeter Only***

***(With Entry Delay ON) (cont'd)***

---

## **Auto-STAY Arming**

Auto-stay allows the system to automatically bypass certain zones if upon arming none of the entry/exit zones are faulted during the exit delay time (no one exits the premises). The system provides an option to set each burglary zone for Auto-stay. All zones enabled for auto-stay except for perimeter and day/night types of zones, has exit delay time when the partition is armed.

Check with your installer for the zones assigned for Auto-STAY.

### **NOTES:**

- Auto-STAY applies to all four arming modes (AWAY, STAY, INSTANT and MAXIMUM).
- Arming the partition AWAY via an RF transmitter overrides the Auto-stay feature (partition will not bypass zones programmed for auto-stay).

## Arming Perimeter Only

(With Entry Delay OFF)

---

### Using the **7** INSTANT Key

Use this key when you are staying home and do not expect anyone to use the entrance door.

When armed in INSTANT mode, the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. The alarm will also sound immediately if anyone opens the entrance door.

The system provides three INSTANT modes: INSTANT mode 1, 2, and 3. INSTANT modes 1 and 2, when activated, automatically bypass specific zones assigned by your installer to each of the INSTANT modes. INSTANT mode 3, when activated, automatically bypasses all zones assigned to INSTANT modes 1 and 2. Check with your installer for a list of the zones that are bypassed during each INSTANT mode.

**Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)**

1. Enter your security code and press **7** <sup>INSTANT</sup> + **1** for INSTANT Code 1.  
Enter your security code and press **7** + **2** for INSTANT Code 2.  
Enter your security code and press **7** + **3** for INSTANT Code 3.

**NOTE:** If none of the zones in a partition are assigned to INSTANT mode 2, then when the user enters **[User Code] + [7]** (INSTANT), all zones assigned to INSTANT mode 1 are automatically bypassed.

2. 

|                                  |
|----------------------------------|
| ARMED *INSTANT1<br>ZONE BYPASSED |
|----------------------------------|

 The keypad beeps three times, displays the armed message and indicates which INSTANT mode (1, 2, or 3).

**NOTE:** "ZONE BYPASSED" in this display simply indicates that some zones of protection are not armed when using RSTART mode.

# Arming All Protection

(With Entry Delay ON)

---

## Using the 2 AWAY Key

Use this key when no one will be staying on the premises.

When armed in AWAY mode, the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm. You may also reenter through the entrance door, but must disarm the system within the entry delay period or an alarm will occur.

**Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)**

1. Enter your security code and press 2 <sup>AWAY</sup> .
2. 

|                                    |
|------------------------------------|
| ARMED **AWAY**<br>YOU MAY EXIT NOW |
|------------------------------------|

 The keypad will beep twice and will display the armed message.  
**NOTE:** The "YOU MAY EXIT NOW" portion of the message disappears when exit delay expires.

## Arming all Protection

(with Entry Delay OFF)

---

### Using the 4 MAXIMUM Key

Use this key when the premises will be vacant for extended periods of time such as vacations, etc., or when no one will be moving through protected interior areas.

When armed in MAXIMUM mode, the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm, but an alarm will be sounded as soon as someone reenters.

**Close all perimeter windows and doors before arming (see *Checking for Open Zones* section).**

#### MAXIMUM

1. Enter your security code and press 4 .
2. ARMED \*MAXIMUM\*  
YOU MAY EXIT NOW The keypad will beep twice and will display the armed message.

**NOTE:** The "YOU MAY EXIT NOW" portion of the message disappears when exit delay expires.

## **Quick Exit**

---

### **Using the # + 9 Keys**

The Quick Exit feature allows you to exit the armed partition without having to disarm and then rearm the partition.

#### **To Quick Exit the premises:**

1. Press the # key and then press the 9 key.
2. The system will sound the exit beeps, if enabled, and will give you the programmed exit delay time to leave the premises.

## Disarming and Silencing Alarms

---

### Using the **1** OFF Key

The **OFF** key is used to disarm the system and to silence alarm and trouble sounds. See *Summary of Audible Notification* section for information that will help you to distinguish between FIRE and BURGLARY alarm sounds.

**IMPORTANT:** If you return and the main burglary sounder is on, DO NOT enter the premises, but call the police from a nearby safe location. If you return after an alarm has occurred and the main sounder has shut itself off, the keypad will beep rapidly upon entering, indicating that an alarm has occurred during your absence. LEAVE the premises IMMEDIATELY and CONTACT THE POLICE from a nearby safe location.

#### To disarm the system and silence burglary or fire alarms:

1. Enter your security code and press **OFF** **1** .

DISARMED  
READY TO ARM

2. The Ready message will be displayed (if no alarms have occurred while armed) and the keypad will beep once to confirm that the system is disarmed.

### Memory of Alarm

The keypad displays the zone number and type of alarm for any zone that has an alarm condition. These messages will remain displayed until cleared by a user. If an alarm has occurred, note the zone number displayed on the keypad and repeat step 1 above to clear the "Memory of Alarm" and restore the Ready message display. If the Ready message will not display, go to the displayed zone and remedy the fault (close windows, etc.). If the fault cannot be remedied, notify the alarm agency.

If the system was armed when the alarm occurred, repeat step 1 twice: once to disarm the system, a second time to clear the display.

# Using the Keyswitch

---

## General

Your system may be equipped with a keyswitch for use when arming and disarming a partition. A red and green light on the keyswitch plate indicate the status of your system as follows:

**Green Light:** Lights when the system is **disarmed and ready** to be armed (no open zones). If the system is disarmed and the green light is off, it indicates the system is not ready (one or more zones are open).

**Red Light:** Lights when system is armed or memory of alarm exists.

**Lit Steady:** Partition is **armed in AWAY** mode.


**Slow Flashing:** Partition is **armed in STAY** mode.

**Rapid Flashing:** Memory of alarm, indicating an alarm has occurred.

## Arming

**To arm in the AWAY mode,** turn the key to the right for 1 second and release. Keypads will beep twice and the red light will stay on steady.

**To arm in the STAY mode,** turn the key to the right and hold for longer than 10 seconds, then release. Keypads will beep three times and the red light will flash slowly.

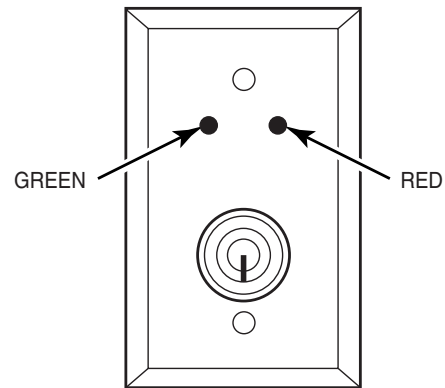

keyswitch-001-V1

## Disarming

**To disarm the partition,** turn the key to the right and release. If an alarm has occurred, the red light will be flashing rapidly (memory of alarm).

**NOTE:** Your system may be programmed to use the keyswitch to silence fire alarms without affecting the status of the burglary portion of the system. Check with your installer to see if this feature has been enabled.



## Chime Mode

---

### Using the **9** Key

Your system can be set to alert you to the opening of a door or window while it is disarmed by using CHIME mode. When activated, three tones will sound at the Keypad whenever a protected perimeter door or window is opened, and the Not Ready message will be displayed. Pressing the **READY** key will display the open protection points.

Note that Chime mode can be activated only when the system is disarmed.

1. **To turn Chime Mode on**, enter the security code and press **9** .

CHIME MODE ON

The CHIME MODE ON message will appear for about 2 seconds then disappear. To display this message again (to determine whether chime mode is on or off), simply press and hold down the **CHIME** key for 5 seconds.

2. **To turn Chime Mode off**, enter the security code and press **9** again.

CHIME MODE OFF

The CHIME MODE OFF message will appear for about 2 seconds then disappears. To display this message again (to determine whether chime mode is on or off), simply press and hold down the **CHIME** key for 5 seconds.

# ***Viewing Alarm Company Messages***

---

## **General Information**

Users of the system may periodically receive messages on their display screens from their monitoring agency or installer. When a message is waiting to be viewed, the message shown below will appear.

MESSAGE. PRESS 0  
FOR 5 SECS.

1. Press and hold down  key for 5 seconds.
2. The message could take up to four screens to display all the information available.

**NOTE:** Any message sent by the central station downloader may be viewed at any partition's keypad.

# Panic Keys

**(For Manually Activating Silent and/or Audible Alarms)**

---

## Using Panic Keys

Your system may have been programmed to use special key combinations to manually activate panic functions. The functions that might be programmed are Silent Emergency, Audible Emergency, and Personal Emergency. See your installer for the function(s) that may have been programmed for your system.

### Active Panic Functions

(Your installer should note which function(s) is active in your system.)

| Keys    | Zone | Function |
|---------|------|----------|
| 1 and * | 995  |          |
| 3 and # | 996  |          |
| * and # | 999  |          |
| A       | 995  |          |
| B       | 999  |          |
| C       | 996  |          |

**To use a paired key panic function, simply press both keys of the assigned pair at the same time.**

**If your keypad(s) have lettered keys for panic functions, press the designated key and hold down for at least 2 seconds to activate the panic function.**

**A silent emergency** sends a silent alarm signal to the central station, but there will be no audible alarms or visual displays.

**An audible emergency** sends an emergency message to the central station (if connected) and will sound a loud, steady alarm at your keypad **and** at any external sounders that may be connected (**ALARM** plus a zone number would also be displayed).

A personal emergency alarm sends an emergency message to the central station *(if connected) and will sound at Keypads, but not at external Notification Appliance Circuits.* (**ALARM** plus a zone number would also be displayed.)

# ***Relay Control***

---

## **General Information**

Your system may be set up using a relay so that a door (such as in a lobby) can be unlocked momentarily using a keypad command. Ask your installer if this has been done in our system.

## **Executing**

To activate the relay enter your security code + [0] at the keypad. The door will unlock for 2 seconds.

## Using #70 Relay Menu Mode

---

### General Information

Your system may be set up so that certain lights or other devices can be turned on or off by using the #70 command from a keypad. Ask your installer if this has been done in your system.

**To activate relays from a keypad**, enter 4-digit security code + [#] +70. Follow the keypad prompts described below.

**NOTE:** Your installer may have restricted the use of this function. Please check with your installer.

|   |
|---|
| ENTER DEVICE NO.<br>00=QUIT                      01 |
|---|

Enter the 2-digit number of the device to be activated.

Note that if an invalid number is entered, the system will simply ask you to reenter the number.

|                                      |
|--------------------------------------|
| NN DEVICE IS OFF<br>HIT 0=OFF , 1=ON |
|--------------------------------------|

Press 0 or 1 to turn the device off or on respectively. "nn" represents the 2-digit device number and *voice descriptor* is the relay voice descriptor programmed by the installer.

|                                   |
|-----------------------------------|
| NN DEVICE IS OFF<br>HIT THE * KEY |
|-----------------------------------|

**From a keypad**, press \* to continue. The ENTER DEVICE NO. prompt will appear.

## Using Schedules

---

### Delaying the Closing Time

Your system's programmed schedules may automatically arm the system at a predetermined time. In the event a user must stay on the premises later than usual, users with master or manager authority levels can manually delay the automatic arming (closing) time up to 2 hours. **To delay the closing time:**

1. Enter your security code (master or manager authority levels only).
2. Press the  key, followed by **82**.
3. A menu prompt will be displayed, asking for the number of hours of delay.

|                                 |
|---------------------------------|
| CLOSING DELAY?<br>KEY 0-2 HOURS |
|---------------------------------|

Enter the desired number of hours of delay, 1 or 2. The system automatically exits this mode after entry.

Note that the delay is from the **scheduled closing time**, not from the time the command is entered.

**IMPORTANT:** The selected delay cannot be **reduced** once it is set. A 1-hour delay can be **increased** to 2 hours, though.

4. The system will automatically send a message to the central station informing them that the programmed schedule has been changed.

### Temporary Open/Close Schedules

Temporary schedules allow you to override the normal schedules programmed by the installer. Temporary schedules can be in effect for up to one week, and take effect as soon as they are programmed.

They are comprised of an arming (closing) time window and a disarming (opening) time window. A time window is simply a defined period of time, at the end of which arming or disarming will occur.

Before programming, use a worksheet similar to the one below to plan your schedule. This will make it easier when actually programming the schedule.

| Arm/Disarm           | Mon | Tue | Wed | Thu | Fri | Sat | Sun |
|----------------------|-----|-----|-----|-----|-----|-----|-----|
| <b>Windows</b>       |     |     |     |     |     |     |     |
| <b>Disarm Window</b> |     |     |     |     |     |     |     |
| Start Time HH:MM     |     |     |     |     |     |     |     |
| Stop Time HH:MM      |     |     |     |     |     |     |     |
| <b>Arm Window</b>    |     |     |     |     |     |     |     |
| Start Time HH:MM     |     |     |     |     |     |     |     |
| Stop Time HH:MM      |     |     |     |     |     |     |     |

## Using Schedules (cont'd)

---

### Programming Temporary Schedules

Temporary schedules only affect the partition from which it is entered. Temporary schedules can be reused at later dates simply by scrolling (by pressing #) to the DAYS? prompt (described below) and activating the appropriate days. This should be considered when defining daily time windows. Note that only users with authority level of manager or higher can program temporary schedules.

#### To program temporary schedules:

1. Enter your security code.
2. Press the  key followed by 81.
3. The following prompts will appear.

|                                     |
|-------------------------------------|
| MON DISARM WIND.<br>07:45AM 08:45AM |
|-------------------------------------|

The cursor will be positioned on the tens of hours digit of the start time for Monday's disarm window. Enter the desired hour. Press \* to move to the minutes field. The minutes are entered in the same manner. The AM/PM indication is changed by hitting any key, 0-9, while the cursor is under the letter A/P position. Repeat for the stop time entry. Press the \* key to move to the arming window for Monday.

Press # to move to the next screen display without making changes.

|                                   |
|-----------------------------------|
| MON ARM WINDOW<br>07:45AM 08:45AM |
|-----------------------------------|

The cursor will be positioned on the tens of hours digit of the start time for the arm window. Repeat the previous steps to enter the start and stop time for Monday's arming window.

|                                     |
|-------------------------------------|
| TUE DISARM WIND.<br>07:45AM 08:45AM |
|-------------------------------------|

After the windows for that day have been completed, the system will prompt for disarm and arm time windows for the next day. Repeat the procedure for all days of the week.

When all of the days have been completed, the system will ask which days are to be activated.

## ***Using Schedules (cont'd)***

---

|                |
|----------------|
| DAYS ? MTWTFSS |
| HIT 0-7 X X    |

This is the prompt that actually activates the temporary schedule, and allows the temporary schedule to be customized to a particular week's needs. To select the days that are to be activated, enter the desired number 1-7 (Monday = 1). An "X" will appear under that day, indicating the previously entered schedule for that day is active. Entering a day's number again will deactivate that day. Pressing 0 will turn all days on/off.

The temporary schedule will only be in effect for the days which have the letter x underneath them. As the week progresses, the days are reset to the inactive state.

When completed, press \* to exit the temporary schedule entry mode.



# Programming Device Timers

## General Information

Device timers consist of an ON time and an OFF time, and selected days of the week in which they are active. There are up to 20 timers that can be used to control various devices, such as lights or appliances. Your installer will have programmed the appropriate devices into the system (up to 96 devices can be programmed).

Each timer controls a single device (designated as an output number) that you select. For example, timer 1 might be set to turn the porch lights on at 7:00pm and turn them off at 11:00pm. Timer 2 might turn on the air conditioner Monday-Friday at 4:30pm to cool the premises before you arrive at 5:00pm, and turn it off at 10:00pm when you are retiring for the night. If desired, different timers can control the same device. For example, timer 2 could be used Monday-Friday as in the previous example, and timer 3 could be set to turn the air conditioner on and off at different times Saturday and Sunday.

### To enter the device timer menu mode:

Enter your security code, then press the  key followed by 83.

Up to 20 timers can be programmed. A number 1-20 identifies each timer. Enter the desired timer number to be programmed (1-20). Press \* to accept entry.

If that timer number has already been programmed, a summary screen will appear. In this example:

06 = Timer #

04 = Output Device # affected by this timer

PORCH LITE = Output Descriptor for Device 4

07:00PM = Start Time;

11:45PM = Stop Time

Press \* to continue.

*See your installer for device numbers.*

Enter the desired output device number (1-96). As the number is entered, the device's description will appear.

To delete a previously programmed timer, enter 00 as the output number.

## ***Programming Device Timers (cont'd)***

---

00 ON TIME ?  
00:00 PM

Enter the time you want the device turned on using 00:01 - 11:59 format. When the display shows the desired time, press the \* key to move to the AM/PM field. Press any key 0-9 to change the AM/PM indication.

Enter 00:00 if this timer is not being used to turn something ON for the days selected below. (Ex. using one timer to turn lights on one day and using another timer to turn them off on another day).

00 OFF TIME ?  
00:00 PM

Enter the time you want the device turned off using 00:01 - 11:59 format. When the display shows the desired time, press the \* key to move to the AM/PM field. Press any key 0-9 to change the AM/PM indication.

Enter 00:00 if this timer is not being used to turn something OFF for the days selected below. (Ex. using one timer to turn lights on one day and using another timer to turn them off on another day).

00 DAYS? MTWTFSS  
HIT 0-7 X X

Select the days on which the device is to be activated by entering 1-7 (Monday = 1). An "X" will appear under that day, indicating the output for that day is active. Entering a day's number again will deactivate that day. Pressing 0 will turn all days on/off. The outputs will only be in effect for the days that have the letter x underneath them. As the week progresses, the days are reset to the inactive state, unless the permanent option is selected (next screen prompt). When completed, press \* to continue.

00 PERMANENT ?  
0 = NO, 1 = YES 0

Answering 1 (YES) means the system executes this timer continuously. Answering 0 (NO) means the system executes each day's output only once.

## ***Programming Device Timers (cont'd)***

---

### **Randomize Output Device Times**

Devices in your system may be set for a random schedule, whereby they will turn on and off at different times each day. This is useful when going on vacation and you desire the turning on and off of the lights to give the appearance of someone being home. Your installer sets these devices for a random schedule. You can initiate a random schedule by either of the following methods:

1. Enter your security code and press  followed by 41.

This will randomize, up to 30 minutes, the activation time of all devices, programmed for randomization, assigned to the partition the sequence is entered in. Enter the sequence again to turn off the random schedule.

2. Enter your security code and press  followed by 42.

This is the same as the method above, except the randomization occurs only on devices with activation times within 6 PM and 5 AM. Enter the same sequence again to turn off the random schedule.

## **Using #77 Instant Activation Mode**

---

The #77 Instant Activation Mode is used to activate outputs, bypass zones, etc. immediately upon exiting the #77 Mode. The actions that may be activated are relay commands, arm/disarm commands, zone bypassing commands, and open/close access conditions.

### **Relay Commands**

| <u>Action Code</u> |                                 | <u>Action Specifier</u> |
|--------------------|---------------------------------|-------------------------|
| 01                 | Relay On                        | Relay #                 |
| 02                 | Relay Off                       | Relay #                 |
| 03                 | Relay Close for 2 seconds       | Relay #                 |
| 04                 | Relay Close XX minutes*         | Relay #                 |
| 05                 | Relay Close YY seconds*         | Relay #                 |
| 06                 | Relay Group On                  | Relay Group #           |
| 07                 | Relay Group Off                 | Relay Group #           |
| 08                 | Relay Group Close for 2 seconds | Relay Group #           |
| 09                 | Relay Group Close XX minutes*   | Relay Group #           |
| 10                 | Relay Group Close YY seconds*   | Relay Group #           |

\*Check with your installer for the amount of time.

### **Arm/Disarm Commands**

Activation times 1 (Beginning), 2 (End), and 3 (During) are the only valid choices for automatic arming and disarming functions.

"During" can be used to arm or disarm the control for a specific time only. For example, if "during" is selected with Arm-STAY, the system will automatically Arm-STAY at the beginning of the window and automatically disarm at the end of the window.

| <u>Action Code</u> |  | <u>Action Specifier</u> |
|--------------------|--|-------------------------|
| 20                 | Arm-STAY                                 | Partition(s)            |
| 21                 | Arm AWAY                                 | Partition(s)            |
| 22                 | Disarm                                   | Partition(s)            |
| 23                 | Force Arm STAY (Auto-bypass faulted zns) | Partition(s)            |
| 24                 | Force Arm AWAY (Auto-bypass faulted zns) | Partition(s)            |
| 25                 | Arm INSTANT                              | Partition(s)            |
| 26                 | Arm MAXIMUM                              | Partition(s)            |

## ***Using #77 Instant Activation Mode (cont'd)***

---

### **Bypass Commands**

Activation times **1** (Beginning), **2** (End), and **3** (During) are the only valid choices for bypass commands. If **3** (During) is selected for auto-bypassing, the system bypasses the zone(s) specified on a particular zone list at the beginning of the window and unbypasses them at the end of the window. If it is selected for auto unbypassing, the system removes the bypass at the beginning of the window and restores the bypass at the end of the window.

| <u>Action Code</u> |                           | <u>Action Specifier</u> |
|--------------------|---------------------------|-------------------------|
| 30                 | Auto bypass - Zone list   | Zone list #             |
| 31                 | Auto unbypass - Zone list | Zone list #             |

### **Open/Close Windows**

Activation time **3** (During) is the only valid choice for these commands.

| <u>Action Code</u> |                                       | <u>Action Specifier</u> |
|--------------------|---------------------------------------|-------------------------|
| 40                 | Enable Opening Window by partition    | Partition(s)            |
| 41                 | Enable Closing Window by partition    | Partition(s)            |
| 42                 | Enable Access Window for access group | Access Group            |

### **Access Control Commands**

| <u>Action Code</u> |  | <u>Action Specifier</u> |
|--------------------|--|-------------------------|
| 55                 | Access Point Grant                         | Access Point #          |
| 56                 | Access Point Grant with Override           | Access Point #          |
| 57                 | Access Point Protect                       | Access Point #          |
| 58                 | Access Point Bypass                        | Access Point #          |
| 59                 | Access Point Lock                          | Access Point #          |
| 60                 | Access Point Exit                          | Access Point #          |
| 61                 | Access Point Group Grant                   | Group #                 |
| 62                 | Access Point Group Grant with Override     | Group #                 |
| 63                 | Access Point Group Protect                 | Group #                 |
| 64                 | Access Point Group Bypass                  | Group #                 |
| 66                 | Access Point Group Exit                    | Group #                 |
| 67                 | Access Point Partition Grant               | Partition #             |
| 68                 | Access Point Partition Grant with Override | Partition #             |
| 69                 | Access Point Protect by Partition          | Partition #             |
| 70                 | Access Point Bypass by Partition           | Partition #             |
| 71                 | Access Point Lock by Partition             | Partition #             |
| 72                 | Access Point Exit by Partition             | Partition #             |
| 73                 | Access Point Trigger On                    | Trigger #               |
| 74                 | Access Point Trigger Off                   | Trigger #               |

## Using #77 Instant Activation Mode (cont'd)

---

### Additional Commands

| <u>Action Code</u>            | <u>Action Specifier</u> |
|-------------------------------|-------------------------|
| 77 Access Point Group Enable  | Group #                 |
| 78 Access Point Group Disable | Group #                 |

### To enter the Instant Activation Mode:

Enter your security code; then press the [#] key followed by 77.

ACTION ?

**Enter the code for the desired action.** The action codes are the events that are to take place when either the system exits the #77 Mode or the scheduled time is reached, depending on the action selected.

Press [\*] to continue.

**Enter the action specifier.** This defines what the action will affect (relay, relay group, partition, zone list, user group). The action specifier screen prompt varies, depending on the type of action selected.

As an example, if you selected "Auto Bypass" as the action, the action specifier prompt would be:

ZONE LIST?

ARE YOU SURE?

1 = YES 0 = NO 0

Enter **1** (YES) or **0** (NO).

Press [\*] to continue.

QUIT MENU MODE?

1 = YES 0 = NO

Enter **1** (YES) or **0** (NO).

Press [\*] to continue.

## ***Event Log Procedures***

---

### **General Information**

The system has the ability to record various events in a history log wherein each event is recorded in one of five categories (listed below), with the time and date of its occurrence. The Event Log holds up to 1000 events, with the oldest event being replaced by the logging of any new event after the log is full. Using an alpha keypad, the Event Log can be viewed one category at a time, or can display all events, regardless of category (ALL EVENT LOG). The system also allows selection of displaying the COMPLETE log, or only those events occurring since the last installer service (RECENT). In addition, events in the other partitions can be viewed by users authorized to access those partitions. Note that events are displayed in chronological order, from most recent to oldest.

### **To Display The Event Log**

1. **Enter CODE + [#] + [6] + [0]**
2. **Select the display mode.**  
RECENT: Displays only those events occurring since last Event Log Clear command was executed.  
COMPLETE: Displays complete event log (up to 512 events).  
Press the desired key, 0 or 1.

|                                  |
|----------------------------------|
| ENTER 0 = RECENT<br>1 = COMPLETE |
|----------------------------------|

3. **Select the partition, 0-2.**  
Enter the partition number for the partition whose events are to be displayed.  
Entering 0 (NO) will display all partitions' events.

|                                     |
|-------------------------------------|
| SCAN LOG BY PART<br>0=NO 1-2=PART # |
|-------------------------------------|

## ***Event Logging Procedures (continued)***

---

4. Use the [3] and [1] keys (for next and previous categories respectively) to display the categories of events.

Press [8] to select a category and display the first event. Press [8] again for each subsequent event.

Shows burglary alarm occurred in zone 3 (C03) of partition 1 (P1), at 12:02AM on January 1.

|                                   |
|-----------------------------------|
| P1 01/01 12:02AM<br>BURGLARY C003 |
|-----------------------------------|

*Typical  
Event Log  
Display*

After the last event has been displayed, the END OF EVENT LOG message appears for a few seconds, then the system automatically displays the RECENT/COMPLETE mode select screen again (see step 2).

5. To EXIT the Event Log:

Press [\*] at any time.

|                                      |
|--------------------------------------|
| ALARM EVENT LOG<br>TYPE      CCC UUU |
|--------------------------------------|

*Typical  
Category  
Select Screen*

### **ALARM EVENT LOG**

Displays time and date for zones which have either caused an alarm or have been restored in the selected partition.

### **CHECK EVENT LOG**

Displays time and date for zones which have caused a trouble or supervisory condition in the selected partition.

### **BYPASS EVENT LOG**

Displays time and date for zones which have been bypassed in the partition.

### **OPEN EVENT LOG**

Displays time, date and user number or 6-character descriptor for the user, if programmed, for each arming and disarming of the system for the partition selected.

### **SYSTEM EVENT LOG**

Displays time and date for system problems, such as AC Loss, low battery, etc., regardless of partition.

### **ALL EVENT LOG**

Displays all categories of events in chronological order.

|  |
|--|
| <b>See your Installer for<br/>additional information<br/>concerning the event log.</b> |
|--|



## ***Testing the System (To Be Conducted Weekly)***

---

### **Using the 5 TEST Key**

The **TEST** key puts your system into Burglary Walk Test mode, which allows each burglary protection point to be checked for proper operation.

1. Disarm the system and close all protected windows, doors, etc. **READY** should be displayed.

**TEST**

2. Enter your security code and press the 5 key.
3. The external sounder should sound for 3 seconds and then turn off. If the sounder does not sound, it may be due to dialer communication activity. Wait a few minutes and try again. If the sounder still does not sound, **CALL FOR SERVICE IMMEDIATELY**.
4. The keypad will sound a single beep every 15 seconds as a reminder that the system is in Test mode. Each time a protection zone is faulted (opened); the keypad should beep three times. If the sounder does not sound, **CALL FOR SERVICE IMMEDIATELY**.

**NOTES:**

- **No alarm reports will be sent to the central monitoring station while the system is in Test mode.**
- **The system will automatically exit the Test mode if there is no activity (no doors or windows are opened and closed, no motion detectors are activated, etc.) for 60 minutes. The system will beep the keypad(s) twice every 5 seconds during the last 5 minutes as a warning that it is about to exit the Test mode and return to normal operation.**

### **Testing Your System**

1. Open and close each protected door and window in turn and listen for three beeps. Each faulted protection point should appear on the display.
2. Walk in front of any motion detectors (if used) and listen for three beeps as movement is detected (wireless motion detectors have a 3-1/2 minute lockout between trips). Each detector's should appear on the display when it is activated.
3. Follow the manufacturer's instructions to test all smoke detectors to ensure that all are functioning properly. Each detector should appear on the display when activated.
4. When all protection points have been checked, there should be no zone identification numbers displayed. If a problem is experienced with any protection point (no confirming sounds, no display), **CALL FOR SERVICE IMMEDIATELY**.
5. Turn off Test mode by entering the security code + the **OFF** key.

## ***Fire Alarm System***

---

Your fire alarm system (if installed) is on 24 hours a day, providing continuous protection. In the event of an emergency, the smoke and heat detectors automatically send signals to your Control, triggering a loud interrupting sound from the keypad and the optional exterior sounders. FIRE appears at your keypad and remains on until you silence the alarm.

### **In Case Of Fire Alarm**

1. Should you become aware of a fire emergency before your detectors sense the problem, go to your nearest keypad and manually initiate an alarm by pressing the panic key assigned as FIRE emergency (if programmed by the installer) and hold down for at least 2 seconds.
2. Evacuate all occupants from the premises.
3. If flames and/or smoke are present, leave the premises and notify your local Fire Department immediately.
4. If no flames or smoke are apparent, investigate the cause of the alarm. The descriptor of the zone(s) in alarm appears at the keypad.

### **Silencing a Fire Alarm**

1. Silence the keypad by entering your code and pressing the **OFF** key. This may or may not also silence the fire bells. A second entry may be required, depending on system programming. To clear the display, enter your code and press the **OFF** key again.
2. If the keypad does not indicate a **READY** condition after the second **OFF** sequence, press the **READY** key to display the zone(s) that are faulted. Be sure to check that smoke detectors are not responding to smoke or heat producing objects in their vicinity. Should this be the case, eliminate the source of heat or smoke.
3. If this does not remedy the problem, there may still be smoke in the detector. Clear it by fanning the detector for about 30 seconds.
4. You can clear the display by entering your code + the **OFF** key.

## ***Fire Alarm System (cont'd)***

---

### **Event Display Lock**

If several zones produce an alarm, trouble or supervisory, the system will display the first zone that produced an event. To display the other zone(s) in alarm or trouble, press the [\*] key for each zone.

### **Fire Drill Test (Code + # + 69)**

This test causes Notification Appliance Circuits to be activated for the purpose of conducting a fire drill or a bell test. This can only be activated by the installer or a master user from Partition 1 keypads as follows:

1. Enter the corresponding security code and press [#] + 69 (make sure the burglary portion of the system is disarmed). Keypads will display "FIRE DRILL ACTIVE" while the test is active.
2. The test may be stopped by entering any security code and pressing **OFF**.

**NOTE:** The system continues to monitor all 24-hour zones (fire, panic, etc.), while this test is active, and will end the test when an alarm condition is detected. This test should be conducted at periodic intervals as determined by the local authority having jurisdiction.

# Trouble Conditions

---

## Typical Trouble Displays

The word **CHECK** or **TRBL** on the Keypad's display, accompanied by a rapid "beeping" at the Keypad, indicates there is a trouble condition in the system.

**To silence the beeping sound** for trouble conditions, press any key.

- **“CHECK”** or **“TRBL”** display accompanied by a display of **“CALL SERVICE”** indicates that a problem exists with the system that eliminates some of the protection. **CALL FOR SERVICE IMMEDIATELY.**
- **“CHECK”** or **“TRBL”** display accompanied by a display of one or more zone descriptors indicate that a problem exists with those zone(s). First, determine if the zone(s) displayed are intact (this may include Fire and Waterflow type zones) and make them so if they are not. If the problem has been corrected, key an OFF sequence (Code plus OFF) to clear the **“CHECK”** or **“TRBL”** display. If the display persists, **CALL FOR SERVICE IMMEDIATELY.**
- **“CHECK”** or **“TRBL”** display accompanied by a display of **“6XX,”** where XX = 01-32, indicates a trouble on a supervised relay (corresponding relay number 01-32).
- **“CHECK”** or **“TRBL”** display accompanied by a display of **“8XX,”** where XX = 00-30, indicates a trouble on a peripheral device (connected to the panel's keypad terminals).
- **“CHECK”** or **“TRBL”** display accompanied by a display of **“9XX,”** where XX = 00-99, indicates a system trouble exists (dialers, Notification Appliance Circuits, ground fault, etc.). These zones are as follows:

|                         |  |
|-------------------------|--|
| 970: Bell 1 Output      | 975: Dialer 2  |
| 971: Bell 2 Output      | 988: 2 <sup>nd</sup> RF Receiver – not receiving signals |
| 972: Earth Ground Fault | 990: 1 <sup>st</sup> RF Receiver – not receiving signals |
| 973: J2 Trigger Output  | 997: Polling Loop Short                                  |
| 974: Dialer 1           |  |
- **“SUPV”** display accompanied by a display of one or more zone descriptors indicates a problem on fire supervisory zone(s). This means that the operation of the fire alarm system may be compromised. First, determine if the zone(s) displayed are intact and make them so if they are not. If the problem has been corrected, key an OFF sequence (Code plus OFF) to clear the **“SUPV”** display. If the display persists, **CALL FOR SERVICE IMMEDIATELY.**

## ***Trouble Conditions (cont'd)***

---

- A display of "**COMM. FAILURE**" at the Keypad indicates that a failure has occurred in the telephone communication portion of your system. CALL FOR SERVICE IMMEDIATELY.
- A display of "**SYSTEM LO BAT**", accompanied by a once per minute "beeping" at the Keypad indicates that a low system battery condition exists. CALL FOR SERVICE IMMEDIATELY.
- A display of "**LO BAT**" and a zone descriptor, accompanied by a once per minute "beeping" at the Keypad indicates that a low battery condition exists in the wireless transmitter displayed. CALL FOR SERVICE IMMEDIATELY.
- A display of "**MODEM COMM**" indicates that the control is on-line with the central station's remote computer. The control will not operate while on-line.
- A display of "**HSENS**" and a zone number indicates a smoke detector with a high sensitivity level, which may cause false alarms. CALL FOR SERVICE IMMEDIATELY.
- A display of "**LSSENS**" and a zone number indicates a smoke detector with a low sensitivity level. Detectors with a low sensitivity might not detect a smoke condition. CALL FOR SERVICE IMMEDIATELY.

### **Power Failure**

If the message "**AC LOSS**" is displayed, the Keypad is operating on battery power only. If only some lights are out on the premises, check circuit breakers and fuses and reset or replace as necessary. CALL FOR SERVICE IMMEDIATELY if AC power cannot be restored.

#### **SERVICING INFORMATION**

Your local HONEYWELL dealer is the person best qualified to service your alarm system. Arranging some kind of regular service program with him is advisable. Your local HONEYWELL dealer is:

Name: \_\_\_\_\_

Address: \_\_\_\_\_  
\_\_\_\_\_

Phone: \_\_\_\_\_

## ***Emergency Evacuation***

---

Establish and regularly practice a plan of escape in the event of fire. The following steps are recommended by the National Fire Protection Association:

1. Position your detector or your interior and/or exterior sounders so that they can be heard by all occupants.
2. Determine two means of escape from each room. One path of escape should lead to the door that permits normal exit from the building. The other may be a window, should your path be impassable. Station an escape ladder at such windows if there is a long drop to the ground.
3. Sketch a floor plan of the building. Show windows, doors, stairs and rooftops that can be used to escape. Indicate escape routes for each room. Keep these routes free from obstruction and post copies of the escape routes in every room.
4. Assure that all fire doors are shut while you in the building. This will prevent deadly smoke from entering while you escape.
5. Try the door. If the door is hot, check your alternate escape route. If the door is cool, open it cautiously. Be prepared to slam the door if smoke or heat rushes in.
6. Where smoke is present, crawl on the ground; do not walk upright. Smoke rises and may overcome you. Clearer air is near the floor.
7. Escape quickly; don't panic.
8. Establish a common meeting place outdoors, away from your house, where everyone can meet and then take steps to contact the authorities and account for those missing. Choose someone to assure that nobody returns to the house — many die going back.

## Maintaining Your System

---

### Taking Care of Your System

The components of your security system are designed to be as free of maintenance as possible. However, there are some things you can do to make sure that your system is in reliable working condition.

1. Test your system weekly. (See *TESTING THE SYSTEM* and *FIRE ALARM SYSTEM* sections).
2. Test the system after any alarm occurs.

### Replacing Batteries in Wireless Sensors

*Wireless sensors may not have been used in your security system*

Each wireless sensor in your system has a 9-volt or 3-volt battery. The system detects a low battery in any wireless sensor, including smoke detectors, the optional personal emergency transmitter, and the optional portable wireless keypad. (A low battery in a portable wireless keypad is detected as soon as one of its keys is pressed, and the keypad will display **00**.)

Alkaline batteries provide a minimum of 1 year of operation, and in most units and applications, provide 2–4 years of service. Actual battery life will depend on the environment in which the sensor is used, the number of signals that the transmitter in the sensor has had to send, and the specific type of sensor. Factors such as humidity, high or low temperatures or large swings in temperature, may all lead to the reduction of actual battery life in an installation.

**If you have a low battery in a wireless sensor, a low battery message is displayed on the keypad.**

In addition, a battery-operated smoke detector with a low battery also emits a single "chirp" sound once approximately every 20-30 seconds, identifying itself as the smoke detector with the weak battery. If you do not replace a smoke detector's low battery, the smoke detector may sound continuously, as if there were a fire alarm.

**NOTE:** The low battery message comes on as a warning that battery replacement in indicated sensor(s) is due within 30 days. In the meantime, the sensor(s) causing the low battery indication is still fully operational.

**IMPORTANT:** Use only batteries recommended by your installer as replacement.

## ***Maintaining Your System (cont'd)***

---

### **Silencing Low Battery Warning Tones at the Keypad**

The keypad's warning tones can be silenced by performing an OFF sequence (code plus OFF key), but the Keypad's low battery message display will remain on as a reminder that you have a low battery condition in one or more of your sensors. When you replace the weak battery with a fresh one, the sensor will send a "good battery" signal to the control as soon as the sensor is activated (opening/closing of door, window, etc.), causing the low battery display to turn off. If the sensor is not activated, the display will automatically clear within approximately 1 hour.

### **Routine Care**

- Treat the components of your security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.
- The keypad and sensors should be cleaned carefully with a dry soft cloth.  
***Do not spray water or any other fluid on the units.***

**NOTE: It is important that your system is tested periodically to insure proper protection. This includes testing the fire alarm portion of your system. See *TESTING THE SYSTEM* and *FIRE ALARM SYSTEM* sections for the testing procedures.**



## ***Quick Guide to Fire System Functions***

| <b>ACTION</b>                                 | <b>PROCEDURE</b>   |
|---|--|
| Displaying Event                              | <p>The system is programmed to lock the keypad display with the first event that occurred in priority order.</p> <ol style="list-style-type: none"> <li>1. Fire – highest priority</li> <li>2. Life Safety</li> <li>3. Troubles and Supervisory</li> <li>4. System Events (i.e. low battery) – lowest priority</li> </ol> <p>To display the next event, press the [*] key. Repeat as necessary.<br/>To revert to the first event displayed, press the # key.</p> |
| Silencing Fire Alarms                         | <p>Enter User Code +1 (OFF). This will silence the keypad, but may or may not silence the fire bells, depending on system programming. A second User Code + 1 (OFF) sequence may be required. The Silenced LED on the 6160CR-2 keypad will light.</p>  |
| Resetting Alarms                              | <p>To reset alarms, enter User Code + 1 (OFF) a second time. This will clear alarms from memory.</p>   |
| Silencing Troubles and Supervisory Conditions | <p>To Silence Troubles or Supervisory Conditions, enter User Code +1 (OFF). The corresponding LED on the 6160CR-2 keypad will light.</p>   |
| Resetting Troubles and Supervisory Conditions | <p>Troubles and supervisory conditions automatically reset when the condition is cleared if programmed by your installer. Otherwise reset the condition by entering Code + 1 (OFF).</p>  |

## ***Quick Guide to Burglary System Functions***

| <b>FUNCTION</b>         | <b>PROCEDURE</b>  | <b>COMMENTS</b>  |
|-------------------------|---|--|
| Check Zones             | Press [*].  | To view faulted zones when is system not ready   |
| Display All Descriptors | Press and hold [*] for 5 seconds.   | Displays all alpha descriptors programmed by installer.  |
| Arm System              | Enter code.<br>Press arming key desired (AWAY, STAY, INSTANT, MAXIMUM).   | Arms system in mode selected.<br><b>NOTE: After pressing the STAY or INSTANT arming key, enter 1, 2 or 3 to arm in the desired STAY or INSTANT mode.</b> |
| Disarm System           | Enter code. Press OFF [1].  | Disarms system and silences alarms.  |
| Bypass Zones            | Enter code. Press BYPASS [6].<br>Enter zone numbers to be bypassed (use 3-digit entries).<br>Press [*] + [*].   | Bypassed zones are unprotected and will not cause an alarm if violated.  |
| Quick Bypass            | Enter code. Press BYPASS [6].<br>Press [#].   | Bypasses all faulted zones automatically.  |
| Group Bypass            | Enter code. Press BYPASS [6].<br>Press [*]. Enter Group Number (01-15)  | Bypasses all zones assigned to the group.  |
| Chime Mode              | Enter code. Press CHIME [9].  | Keypad will sound if doors or windows are violated while system disarmed.  |
| Test Mode               | Enter code. Press TEST [5]  | Activates alarm sounder and allows sensors to be tested.   |
| View Messages           | Press and hold [0] for at least 5 seconds.  | Message from central station will appear.  |
| View User Capabilities  | Enter user's code. Press [*] + [*].   | Displays partitions and authority levels assigned to the user.   |
| GOTO Partition          | Enter security code. Press [*].<br>Enter partition number (1-2).<br>0 returns to default partition.   | Allows a user at one keypad to perform functions in another partition, if that user is authorized to do so.  |
| Self-Help               | Press and hold any function key for at least 5 seconds.   | Will display abbreviated instructions for the key pressed.   |
| Add a User              | Enter master/manager code.<br>Press CODE [8].<br>Enter new user's user number.<br>Enter code for that user.<br>Enter authority for that user in this partition (1-5).<br>Follow prompts, 1=Yes, 0=No. | Master and Manager level users can add users to the system, each with its own code and authority level.  |
| Change a User's Code    | Enter master/manager code.<br>Press CODE [8].<br>Enter user's 2-digit number.<br>Enter new code for that user.<br>Press 0 (No) at prompt.   | Master and Manager level users can change their own or other users' codes.   |

## **Quick Guide to Burglary System Functions (cont'd)**

| <b>FUNCTION</b>         | <b>PROCEDURE</b>   | <b>COMMENTS</b>   |
|-------------------------|--|---|
| Delete a User           | Enter master/manager code.<br>Press CODE [8].<br>Enter user no. to be deleted.<br>Enter master/manager code.<br>Press 1 (Yes) at prompt. | Master and Manager level users can delete users.<br>A user can only be deleted by a user with higher authority level. |
| Control Output Device   | Enter security code. Press [#]<br>Enter 71 or 72.  | Activate output device as programmed.   |
|                         | Enter security code. Press [#]<br>Enter 70.  | Activate output device manually   |
|                         | Enter security code. Press [#]<br>Enter 77.  | Activate output device or system event instantly  |
| Randomize Output Device | Enter security code. Press [#]<br>Enter 41   | Randomize output devices set for random schedules   |
|                         | Enter security code. Press [#]<br>Enter 42.  | Randomize output devices set for random schedules with activation times between 6 PM and 5 AM                         |
|                         | Enter the sequence used to activate randomization.   | De-activate randomization   |

## Summary of Audible Notification (Alpha Display Keypads)

| SOUND   | CAUSE  | DISPLAY   |
|---|--|---|
| LOUD,<br>INTERRUPTED*<br>Keypad & External            | FIRE ALARM   | <b>FIRE</b> is displayed; descriptor of zone in alarm is displayed.   |
| LOUD,<br>CONTINUOUS*<br>Keypad & External             | BURGLARY/AUDIBLE EMERGENCY<br>ALARM  | <b>ALARM</b> is displayed; descriptor of zone in alarm is also displayed.   |
| ONE SHORT BEEP<br>(not repeated)<br>Keypad only       | a. SYSTEM DISARM<br>b. SYSTEM ARMING ATTEMPT<br>WITH AN OPEN ZONE.<br>c. BYPASS VERIFY           | a. <b>DISARMED/READY TO ARM</b> is displayed.<br>b. The number and descriptor of the open protection zone is displayed.<br>c. Numbers and descriptors of the bypassed protection zones are displayed (One beep is heard for each zone displayed). Subsequently, the following is displayed: <b>DISARMED BYPASS Ready to Arm</b> |
| ONE SHORT BEEP<br>(once every 15<br>sec.) Keypad only | SYSTEM IS IN TEST MODE   | Opened Zone identifications will appear.  |
| TWO SHORT BEEPS<br>(once every 5 sec.)<br>Keypad only | SYSTEM IS ABOUT TO<br>AUTOMATICALLY EXIT TEST<br>MODE  | Opened Zone identifications will appear.  |
| ONE BEEP<br>(every 60 sec.)<br>Keypad only            | LOW BATTERY AT A TRANSMITTER   | <b>LO BAT</b> displayed with description of transmitter.  |
| TWO SHORT BEEPS<br>Keypad only                        | ARM AWAY OR MAXIMUM  | <b>ARMED AWAY</b> or <b>ARMED MAXIMUM</b> is displayed. Red ARMED indicator is lit.   |
| THREE SHORT<br>BEEPS<br>Keypad only                   | a. ARM STAY OR INSTANT<br>b. ZONE OPENED WHILE SYSTEM<br>IS IN CHIME MODE.<br>c. ENTRY WARNING** | a. <b>ARMED STAY ZONE BYPASSED</b> or <b>ARMED INSTANT ZONE BYPASSED</b> is displayed. Red ARMED indicator is lit.<br>b. <b>CHIME</b> displayed, descriptor of open protection zone will be displayed if the [*] key is pressed.<br>c. <b>DISARM SYSTEM OR ALARM WILL OCCUR</b> is displayed.                                   |
| RAPID BEEPING<br>Keypad only                          | a. TROUBLE<br>b. AC POWER LOSS ALERT***<br>c. MEMORY OF ALARM                                    | a. <b>CHECK</b> displayed. Descriptor of troubled protection zone is displayed.<br>b. <b>AC LOSS</b> displayed (may alternate with other displays that may be present).<br>c. <b>FIRE</b> or <b>ALARM</b> is displayed; descriptor of zone in alarm is displayed.   |
| SLOW BEEPING<br>Keypad only                           | a. ENTRY DELAY WARNING**<br>b. EXIT DELAY WARNING<br>(if programmed)                             | a. <b>DISARM SYSTEM OR ALARM WILL OCCUR</b> is displayed. Exceeding the delay time without disarming causes alarm.<br>b. <b>ARMED AWAY</b> or <b>ARMED MAXIMUM</b> is displayed along with <b>You May Exit Now</b>  |

\* If bell is used as Notification Appliance, fire alarm is pulsed ring; burglary/audible emergency is steady ring.

\*\* Entry warning may consist of three short beeps or slow continuous beeping, as programmed by your installer.

\*\*\* Loss of system battery power is not indicated or annunciated by the keypad (warnings are for loss of AC power only).

### **FEDERAL COMMUNICATIONS COMMISSION STATEMENTS**

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

#### **FCC CLASS B STATEMENT**

This equipment has been tested to FCC requirements and has been found acceptable for use. The FCC requires the following statement for your information:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- If using an indoor antenna, have a quality outdoor antenna installed.
- Reorient the receiving antenna until interference is reduced or eliminated.
- Move the radio or television receiver away from the receiver/control.
- Move the antenna leads away from any wire runs to the receiver/control.
- Plug the receiver/control into a different outlet so that it and the radio or television receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

#### **INDUSTRY CANADA CLASS B STATEMENT**

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

#### **FCC / IC STATEMENT**

This device complies with Part 15 of the FCC Rules, and RSS 210 of IC. Operation is subject to the following two conditions: (1) This device may not cause harmful interference (2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC & de RSS 210 des Industries Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.

### **IN THE EVENT OF TELEPHONE OPERATIONAL PROBLEMS**

In the event of telephone operational problems, disconnect the control by removing the plug from the RJ31X (CA38A in Canada) telephone wall jack. We recommend that your certified installer demonstrate disconnecting the phones on installation of the system. Do not disconnect the phone connection inside the control/communicator. Doing so will result in the loss of your phone lines. If the regular phone works correctly after the control/communicator has been disconnected from the phone lines, the control/communicator has a problem and should be returned for repair. If upon disconnection of the control/communicator, there is still a problem on the line, notify the telephone company that they have a problem and request prompt repair service. The user may not under any circumstances (in or out of warranty) attempt any service or repairs to the system. It must be returned to the factory or an authorized service agency for all repairs.

**“FEDERAL COMMUNICATIONS COMMISSION (FCC) Part 68 NOTICE**

This equipment complies with Part 68 of the FCC rules. On the front cover of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This equipment uses the following jacks:

An RJ31X is used to connect this equipment to the telephone network.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact the manufacturer for repair and warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.

There are no user serviceable components in this product, and all necessary repairs must be made by the manufacturer. Other repair methods may invalidate the FCC registration on this product.

This equipment cannot be used on telephone company-provided coin service. Connection to Party Line Service is subject to state tariffs.

This equipment is hearing-aid compatible.

When programming or making test calls to an emergency number, briefly explain to the dispatcher the reason for the call. Perform such activities in the off-peak hours; such as early morning or late evening.

**CANADIAN DEPARTMENT OF COMMUNICATIONS  
(DOC) STATEMENT**

**NOTICE**

The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** User should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.

**AVIS**

L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunications. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. Dans certains cas, les fils intérieurs de l'entreprise utilisés pour un service individuel à la ligne unique peuvent être prolongés au moyen d'un dispositif homologué de raccordement (cordon prolongateur téléphonique interne). L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations. Actuellement, les entreprises de télécommunications ne permettent pas que l'on raccorde leur matériel aux prises d'abonnés, sauf dans les cas précis prévus par les tarifs particuliers de ces entreprises.

Les réparations du matériel homologué doivent être effectuées pas un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise en terre de la source d'énergie électrique, des lignes téléphoniques de réseau de conduites d'eau s'il y en a, soient raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

**Avertissement:** L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'indice de charge (IC) assigné à chaque dispositif terminal pour éviter toute surcharge indique le pourcentage de la charge totale qui peut être raccordé à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100.

## **WARNING!**

### **THE LIMITATIONS OF THIS ALARM SYSTEM**

While this system is an advanced design security system, it does not offer guaranteed protection against burglary or fire or other emergency. Any alarm system, whether commercial or residential, is subject to compromise or failure to warn for a variety of reasons. For example:

- Intruders may gain access through unprotected openings or have the technical sophistication to bypass an alarm sensor or disconnect an alarm warning device.
- Intrusion detectors (e.g. passive infrared detectors), smoke detectors, and many other sensing devices will not work without power. Battery operated devices will not work without batteries, with dead batteries, or if the batteries are not put in properly. Devices powered solely by AC will not work if their AC power supply is cut off for any reason, however briefly.
- Signals sent by wireless transmitters may be blocked or reflected by metal before they reach the alarm receiver. Even if the signal path has been recently checked during a weekly test, blockage can occur if a metal object is moved into the path.
- A user may not be able to reach a panic or emergency button quickly enough.
- While smoke detectors have played a key role in reducing residential fire deaths in the United States, they may not activate or provide early warning for a variety of reasons in as many as 35% of all fires, according to data published by the Federal Emergency Management Agency. Some of the reasons smoke detectors used in conjunction with this System may not work are as follows. Smoke detectors may have been improperly installed and positioned. Smoke detectors may not sense fires that start where smoke cannot reach the detectors, such as in chimneys, in walls, or roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level of a residence or building. A second floor detector, for example, may not sense a first floor or basement fire. Moreover, smoke detectors have sensing limitations. No smoke detector can sense every kind of fire every time. In general, detectors may not always warn about fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. Depending upon the nature of the fire and/or the locations of the smoke detectors, the detector, even if it operates as anticipated, may not provide sufficient warning to allow all occupants to escape in time to prevent injury or death.
- Passive Infrared Motion Detectors can only detect intrusion within the designed ranges as diagrammed in their installation manual. Passive Infrared Detectors do not provide volumetric area protection. They do create multiple beams of protection, and intrusion can only be detected in unobstructed areas covered by those beams. They cannot detect motion or intrusion that takes place behind walls, ceilings, floors, closed doors, glass partitions, glass doors, or windows. Mechanical tampering, masking, painting or spraying of any material on the mirrors, windows or any part of the optical system can reduce their detection ability. Passive Infrared Detectors sense changes in temperature; however, as the ambient temperature of protected area approaches the temperature range of 90° to 105°F, the detection performance can decrease.
- Alarm warning devices such as sirens, bells or horns may not alert people or wake up sleepers if they are located on the other side of closed or partly open doors. If warning devices sound on a different level of the residence from the bedrooms, then they are less likely to waken or alert people inside the bedrooms. Even persons who are awake may not hear the warning if the alarm is muffled from a stereo, radio, air conditioner or other appliance, or by passing traffic. Finally, alarm warning devices, however loud, may not warn hearing-impaired people or waken deep sleepers.
- Telephone lines needed to transmit alarm signals from a premises to a central monitoring station may be out of service or temporarily out of service. Telephone lines are also subject to compromise by sophisticated intruders.
- Even if the system responds to the emergency as intended, however, occupants may have insufficient time to protect themselves from the emergency situation. In the case of a monitored alarm system, authorities may not respond appropriately.
- This equipment, like other electrical devices, is subject to component failure. Even though this equipment is designed to last as long as 10 years, the electronic components could fail at any time.

The most common cause of an alarm system not functioning when an intrusion or fire occurs is inadequate maintenance. This alarm system should be tested weekly to make sure all sensors and transmitters are working properly.

Installing an alarm system may make one eligible for lower insurance rates, but an alarm system is not a substitute for insurance. Homeowners, property owners and renters should continue to act prudently in protecting themselves and continue to insure their lives and property.

We continue to develop new and improved protection devices. Users of alarm systems owe it to themselves and their loved ones to learn about these developments.



## Index

---

|                                       |        |                                  |       |
|---------------------------------------|--------|----------------------------------|-------|
| #70 command .....                     | 45     | Delete User Code .....           | 18    |
| AC Loss .....                         | 61     | Descriptors .....                | 29    |
| <b>Access Another Partition</b> ..... | 23     | <b>Device Timers</b> .....       | 8, 49 |
| Access Control Commands .....         | 53     | Disarm .....                     | 39    |
| <b>Action Code</b> .....              | 52     | DOC .....                        | 71    |
| <b>Action Specifier</b> .....         | 52     | Duress .....                     | 17    |
| <b>Add a User</b> .....               | 19     | <b>Duress Code</b> .....         | 16    |
| ADD NEW USER .....                    | 21     | Emergency .....                  | 5     |
| Add User Code .....                   | 18     | Entry Delay .....                | 15    |
| Ademco Dealer .....                   | 61     | Entry/Exit .....                 | 6     |
| Alarm .....                           | 7      | Event Display Lock .....         | 59    |
| Alkaline batteries .....              | 63     | Event Log Procedures .....       | 55    |
| Alpha Keypads .....                   | 10     | Exit Delay .....                 | 15    |
| Arm/Disarm Commands .....             | 52     | <b>Exit User Edit Mode</b> ..... | 18    |
| Armed .....                           | 6, 7   | Fire .....                       | 5, 43 |
| <b>ARMED INDICATOR</b> .....          | 14     | fire alarm .....                 | 58    |
| Audible Emergency .....               | 43     | Fire Drill Active .....          | 59    |
| Audible Signals .....                 | 68     | Fire Drill Test .....            | 59    |
| Authority Level .....                 | 16     | Fire Protection .....            | 6     |
| Authority Levels .....                | 17, 18 | GLOBAL ARM .....                 | 20    |
| Auto-STAY Arming .....                | 34     | Global Arming .....              | 23    |
| Away .....                            | 6, 23  | Goto .....                       | 20    |
| AWAY .....                            | 40     | GOTO .....                       | 23    |
| AWAY mode .....                       | 36     | GOTO Command .....               | 8     |
| battery life .....                    | 63     | Group Bypass .....               | 32    |
| Burglary .....                        | 5      | <b>HSENS</b> .....               | 61    |
| Burglary Protection .....             | 6, 7   | Instant .....                    | 6, 23 |
| Bypass Commands .....                 | 53     | INSTANT .....                    | 15    |
| Bypass Zones .....                    | 30     | INSTANT mode .....               | 35    |
| <b>Bypassing</b> .....                | 30     | Keypad .....                     | 5     |
| Call Service .....                    | 60     | Keypad back lighting .....       | 10    |
| <b>Change a User's Code</b> .....     | 21     | Keypads .....                    | 10    |
| Change User Code .....                | 18     | Keyswitch .....                  | 40    |
| <b>CHECK</b> .....                    | 60     | LO Bat .....                     | 61    |
| Chime .....                           | 6, 41  | Low Battery .....                | 63    |
| Closing Time .....                    | 46     | <b>Low Battery Warning</b> ..... | 64    |
| Comm. Failure .....                   | 61     | <b>LSENS</b> .....               | 61    |
| Common Lobby .....                    | 26     | Manager .....                    | 17    |
| <b>Delaying Closing Time</b> .....    | 46     | Master .....                     | 17    |
| <b>Delete a User</b> .....            | 22     | Master Keypad .....              | 8, 24 |

---

|                                    |            |   |        |
|------------------------------------|------------|---|--------|
| Maximum .....                      | 6, 23      | <b>Relay Menu Mode</b> .....            | 45     |
| MAXIMUM .....                      | 15         | <b>Replacing Batteries</b> .....        | 63     |
| MAXIMUM mode .....                 | 37         | RF BUTTON .....                         | 19     |
| <b>Memory of Alarm</b> .....       | 7, 39      | <b>Routine Care</b> .....               | 64     |
| Messages .....                     | 42         | Schedules .....                         | 7, 46  |
| Modem Comm .....                   | 61         | Security Code .....                     | 16     |
| MULTI-ACCESS .....                 | 20         | Security Codes .....                    | 16     |
| Not Ready .....                    | 28         | Sensing Devices .....                   | 6      |
| Off .....                          | 23         | Silencing A Fire Alarm .....            | 58     |
| OFF .....                          | 39         | Silent Emergency .....                  | 43     |
| <b>Open Zones</b> .....            | 28         | Smoke Detectors .....                   | 57     |
| <b>Open/Close Schedules</b> .....  | 46         | Stay .....                              | 6, 23  |
| Open/Close Windows .....           | 53         | STAY .....                              | 40     |
| Operator A .....                   | 17         | STAY mode .....                         | 33     |
| Operator B .....                   | 17         | System LO Bat .....                     | 61     |
| Operator C .....                   | 17         | System Overview .....                   | 5      |
| OUTPUT TIMER .....                 | 49         | Temporary Schedules .....               | 46, 47 |
| <b>Panic Keys</b> .....            | 43         | Temporary Users .....                   | 19     |
| <b>PANIC KEYS</b> .....            | 14         | Test Key .....                          | 57     |
| Partitioned Security System .....  | 5          | Test mode .....                         | 57     |
| Partitioned System .....           | 5          | Testing Your System .....               | 57     |
| Personal Emergency .....           | 43         | Time Window .....                       | 46     |
| <b>POWER/READY INDICATOR</b> ..... | 14         | <b>TRBL</b> .....                       | 60     |
| Quick Arm .....                    | 14         | Trouble Condition .....                 | 60     |
| <b>Quick Arming</b> .....          | 16         | UNABLE TO ARM LOBBY .....               | 26     |
| <b>Quick Bypass</b> .....          | 31         | User Edit Mode .....                    | 18     |
| Quick Exit .....                   | 38         | User Numbers .....                      | 16     |
| Quick Guide .....                  | 65, 66, 67 | User's Instructions .....               | 9      |
| Randomize Output Devices .....     | 51         | Using #77 Instant Activation Mode ..... | 52     |
| <b>Ready</b> .....                 | 28         | Wireless Sensor .....                   | 63     |
| READY .....                        | 41         | Zone Bypassed .....                     | 33     |
| Ready Key .....                    | 28         | Zone Descriptors .....                  | 29     |
| Relay commands .....               | 52         | <b>Zones</b> .....                      | 6      |

## **TWO YEAR LIMITED WARRANTY**

Honeywell International Inc., acting through its Security & Communications business ("Seller"), 2 Corporate Center Drive, Melville, New York 11747 warrants its products to be free from defects in materials and workmanship under normal use and service, normal wear and tear excepted, for 24 months from the manufacture date code; provided, however, that in the event the Buyer presents a proper invoice relating to the purchased product and such invoice bears a date later than the manufacture date, then Seller may at its discretion, reflect the warranty period as commencing at invoice date. Except as required by law, this Limited Warranty is only made to Buyer and may not be transferred to any third party. During the applicable warranty period, Seller will repair or replace, at its sole option and as the exclusive remedy hereunder, free of charge, any defective products.

Seller shall have no obligation under this Limited Warranty or otherwise if the product:

- (i) is improperly installed, applied or maintained;
- (ii) installed outside of stated operating parameters, altered or improperly serviced or repaired by anyone other than the Seller/Seller's Authorized Service/Repair Center;
- (iii) damage is caused by outside natural occurrences, such as lightning, power surges, fire, floods, acts of nature, or the like; or
- (iv) defects result from unauthorized modification, misuse, vandalism, alterations of serial numbers, other causes unrelated to defective materials or workmanship, or failures related to batteries of any type used in connection with the products sold hereunder.

### **Exceptions to Warranty With Respect to Honeywell Products listed below:**

Hardwire Contacts and PIRs – Seller warrants parts for hardwire contacts and PIRs in accordance with the terms of the above limited warranty for a period of five (5) years from the manufacture date code.

### **EXCLUSION OF WARRANTIES, LIMITATION OF LIABILITY**

THERE ARE NO WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. TO THE FULLEST EXTENT PERMITTED BY LAW, IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY (i) CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES ARISING OUT OF OR RELATING IN ANY WAY TO THE PRODUCT AND/OR FOR BREACH OF THIS OR ANY OTHER WARRANTY OR CONDITION, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY SELLER'S OWN NEGLIGENCE OR FAULT AND EVEN IF SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES OR DAMAGES. Any product description (whether in writing or made orally by Seller or Seller's agents), specifications, samples, models, bulletin, drawings, diagrams, engineering sheets or similar materials used in connection with the Buyer's order are for the sole purpose of identifying the Seller's products and shall not be construed as an express warranty or condition. Any suggestions by Seller or Seller's agents regarding use, applications, or suitability of the products shall not be construed as an express warranty or condition unless confirmed to be such in writing by Seller. Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise, or that the products will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery or fire without warning, but it is not insurance or a guarantee that such will not occur or will not cause or lead to personal injury or property loss. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON ANY CLAIM AT ALL INCLUDING A CLAIM THE PRODUCT FAILED TO GIVE WARNING. However, if Seller is held liable whether directly or indirectly for any loss or damage with respect to the products it sells, regardless of cause or origin, its maximum liability shall not in any case exceed the purchase price of the product, which shall be fixed as liquidated damages and not as a penalty, and shall be the complete and exclusive remedy against the Seller. Should your product become defective during the warranty, please contact your installer to facilitate repair or replacement with Seller pursuant to the terms hereof. Seller reserves the right to replace any defective product under warranty with new, refurbished, or remanufactured product.

# NOTES

# NOTES

# NOTES

# NOTES

# Honeywell

**2 Corporate Center Drive, Suite 100**  
**P.O. Box 9040, Melville, NY 11747**  
Copyright © 2012 Honeywell International Inc.



800-11045 2/12 Rev. C