

LYNX Touch Series Security Systems

Home Automation Guide

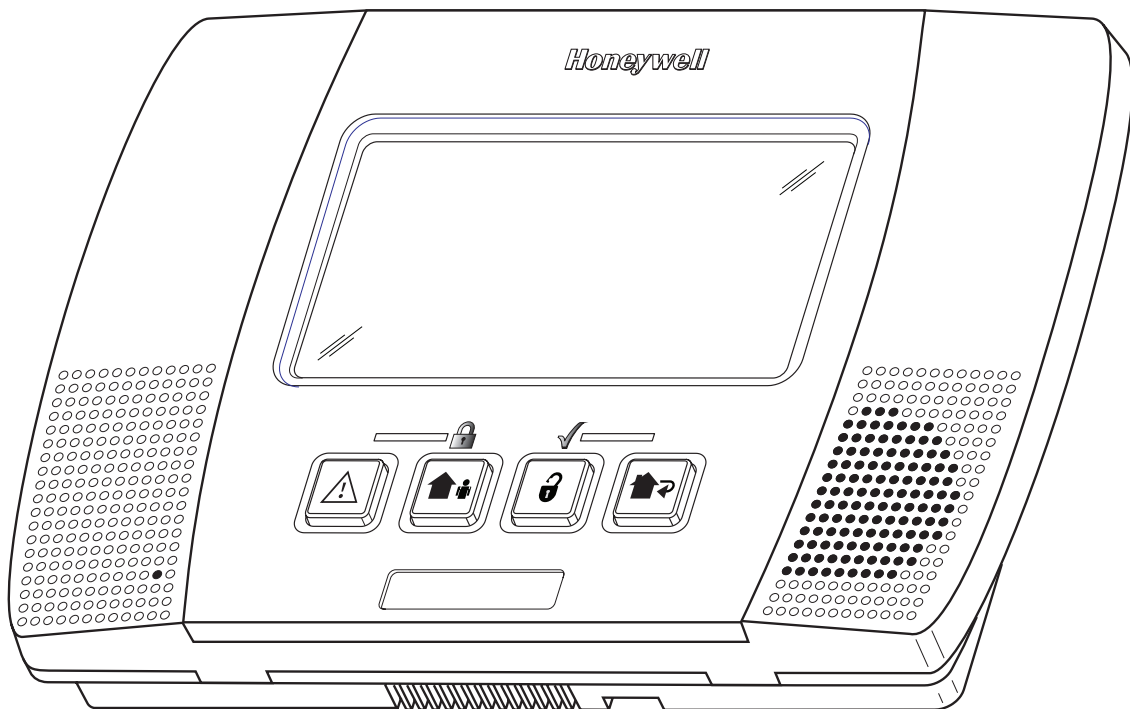


Table of Contents

Z-Wave Programming	3
Including Z-Wave Devices	5
Include/Add a Light Switch or Outlet Module.....	5
Include/Add a Door Lock.....	5
Include/Add a Honeywell Thermostat	6
Thermostat Energy Saving Mode	6
Edit and Delete Z-Wave Devices	7
Edit Z-Wave Device Names.....	7
Exclude/Delete a Z-Wave Device	7
Controlling Z-Wave Devices	7
Turn On/Off All Lights	7
Z-Wave Operation.....	7
Scenes	9
General Information	9
Programming a Scene	9
Editing/Deleting a Scene.....	11
Running a Scene.....	12
Schedules	13
General Information	13
Programming a Scheduled Function	13
Editing a Scheduled Function	14
Deleting a Scheduled Function	15
Rules	15
General Information	15
Programming Rules	16
Editing or Deleting Rules	19
Garage Door Opener Operation	20
Enrolling the 5877 Relay Receiver.....	20
Garage Door Feature Operation.....	20
Operate Garage Door from LYNX Touch Control Panel	21
Advanced Z-Wave Operations	22
View Enrolled Z-Wave Devices or Controllers.....	22
Remove/Delete All Z-Wave Devices (Reset Controller)	22
Shift Primary Control.....	22
Failed Devices (Nodes)	22
Z-Wave Glossary	23
Z-Wave Compatibility	23
Important Notes	24
Wireless Range.....	24
Additional Z-Wave Information.....	24


Home Automation

Z-Wave® Programming


The Honeywell LYNX Touch control is a security enabled Z-Wave® device. It features Z-Wave technology that is designed to automate devices in a home control network. The control allows you to easily add and control multiple devices with the press of a button. The control supports Z-Wave Network Wide Inclusion (NWI) Mode. Check with your installer to see if these features are available.

Your control and every Z-Wave device you add are linked together into a wireless network. Each device in your network has a unique address assigned to it and cannot be activated by your neighbor's Z-Wave controller. The Z-wave network supports multiple controllers allowing additional Z-wave remotes to be used throughout the home. Management of Z-Wave devices (also known as nodes) includes two main operations, inclusion/exclusion and association (or controlling). Refer to the *Controlling Z-Wave Devices* section for information regarding "association". The LYNX Touch supports the Association Command Class.

This section describes how to Include (add) devices into your home control network, edit devices and Exclude (delete) devices. Automation and Z-Wave functions are accessed via the LYNX Touch Automation icon, Z-Wave Device Management and Z-Wave Advanced Tools screens. A list of compatible Z-Wave devices can be found in the Z-Wave Compatibility Chart contained in this document. The devices can be controlled from the LYNX Touch control or the Mobile Internet Device (MID) (or tablet). Check with your Installer to see which features are available with your system. Refer to the *Z-Wave Glossary* for additional information regarding term and functions. Once the Z-Wave devices have been Included (added) to the network they can be controlled either manually or through "Scenes" that are programmed in your LYNX Touch control's Automation feature.

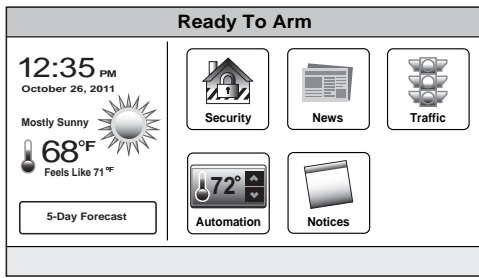

LYNX Touch Dashboard Screen
(Total Connect Remote Services Enabled)

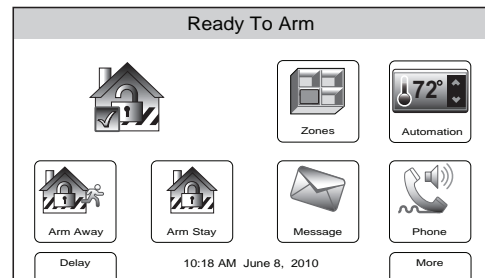


LYNX Touch Security Home Screen




Automation is intended for lifestyle convenience. It should not be used for life safety or property protection.



Z-Wave automation functionality is supplementary only and has not been evaluated by UL.

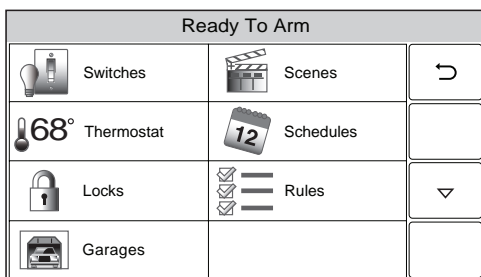

LYNX Touch Automation Screen (Page 1)

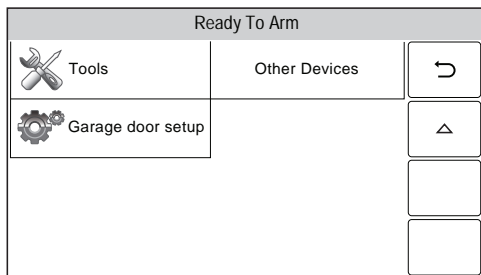

LYNX Touch Automation Screen (Page 2)

Button	Function
Switches	Provides access to the Switches Screen
Thermostats	Provides access to the Thermostats Screen
Locks	Provides access to the Locks Screen
Garages	Provides access to control Garage Door operation.
Scenes	Provides access to the Scenes Screen. Scenes are used to control a single or group of devices, turning them Off/On, to a preset level, temperature or mode. Up to 20 scenes can be programmed.
Schedules	Provides access to the Schedules Screen. Schedules are used to activate Scenes based on a specified time and repeat frequency.
Rules	Provides access to the Rules Screen. Rules are used to automate Z-Wave devices based on specified Zone Activity, Alarm Status or Alarm Conditions.
Press To See Failed devices	Displayed only when device failures have been detected in the Z-Wave network (Refer to the Failed Device section for additional information).

Use the down ▼ arrow to scroll to the next page.

Tools	Provides access to the Z-Wave Device Management Screen
Garage door setup	Provides access to program/enroll Garage Door Openers.
Other Devices	Provides access to control Unknown or Unsupported Devices. Basic On/Off commands are included. The action or response to this command is implemented by the Device Manufacturer. Note: Z-Wave devices that appear in the "Other Devices" category are not supported and are not deemed to be interoperable in LYNX Touch Z-Wave system."

Home Automation

Z-Wave® Programming

Ready To Arm		
Include Devices	Exclude Devices	↶
View Failed Devices		
Advanced Tools		
Warning: automation can only be used for life style enhancement. It must not be used for personal safety or property protection.		

5100-100-074-V0

Z-Wave Device Management Screen

Ready To Arm - Chime		
View Enrolled Devices	View Enrolled Controllers	↶
Reset Controller	Pri. Controller Shift to Secondary	
Locking Door	Learn	
All Devices Off	All Devices On	

5100-100-075-V1

Z-Wave® Advanced Tools Screen

* Although both controllers can operate the Z-Wave devices, only the Primary can Include/Exclude devices.

Button	Function
Include Devices	Enroll Z-Wave Modules
Exclude Devices	Delete Z-Wave Modules
View Failed Devices	Displayed only when device failures have been detected in the Z-Wave network (Refer to the Failed Devices section for additional information).
Advanced Tools	Provides access to additional Z-Wave options

Button	Function
View Enrolled Devices	View Z-Wave device information: System Index/name, Secured or Non-Secured, device type, device ID, manufacturer, node number
View Enrolled Controllers	View Controller Information: Controller role: (Primary or Secondary), Z-Wave Library Rev., Home ID, device type, device ID, node number, manufacturer, Secured or Non-Secured.
Reset Controller	Deletes all nodes and generates a new random Home ID. Resetting the Controller does not Exclude the individual devices; therefore, each device will need to be Excluded before being Included into a Controller.
Pri. Controller Shift to Secondary	Transfers the role of primary controller to another controller* (i.e.; a Z-Wave remote control) and duplicates the Z-Wave network.
Locking Door	Enable Arm Stay, Arm Away or Arm without Auto-Stay when Z-Wave door lock is locked. Causes the system to arm in the selected mode, Away, Stay, or Away without Auto-Stay when the Z-Wave Door is Locked.
Learn	Includes the panel as secondary controller*, usually on a Z-Wave remote control, and duplicates the Z-Wave network. Devices (switches and thermostats only) may be Included using the Z-Wave remote control and the information can be transferred to the control panel using this feature. The secondary controller (control panel) cannot have Z-Wave devices Included. The Learn button is selected after Include process is started on the primary controller.
All Devices Off	Allows User to "manually" turn Off all switches. Note: Some thermostats will enter Setback mode.
All Devices On	Allows User to "manually" turn On all switches. Note: Some thermostats will exit Setback mode.

Including Z-Wave® Devices

The functions described below should be accomplished at the LYNX Touch control.



Z-Wave devices should be in their final location prior to inclusion. When Including a device, it may be necessary to perform an Exclude before a successful Include can be achieved. This is particularly true if the device was previously in another Z-Wave network.

Include/Add a Light Switch or Outlet Module

Install the receptacle, wall switch or lamp/appliance module (refer to the Module’s *Instruction Guide*). To Include a Light switch or outlet module into a Z-Wave network, perform the following:

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the “Automation” icon 2. At the Automation Screen, select “Tools”. 3. At the “Device Management” screen, select “Include Devices”. 4. The panel displays “Ready to include device. Press the function button on device”. Within one minute press the device’s Function button or activate the switch. 5. If the module has been successfully enrolled, the panel displays “Device Found! Please Wait” and then the device information is displayed. 6. After successfully including a light switch or outlet module, the device’s information will be added to the top of the inclusion list. 7. Once you have finished including devices, press the “Home” key to return to the Dashboard screen or select the “⏪” button to return to the previous screen. 	<ul style="list-style-type: none"> • Z-Wave light modules may vary; follow the instructions provided with your specific device to Include properly.

Include/Add a Door Lock



Z-Wave® door locks are encrypted, and for security purposes, enroll at a low power transmission range, approximately 6 feet. This may require enrolling the lock before it is installed in the door.

Assemble the Z-Wave® door lock (if required); install batteries and connect necessary cables (refer to the Door Lock’s *Instruction Guide*). Enroll the door lock adjacent to the control (within 6 feet) and mount within the proper Z-Wave range (refer to the “*Important Notes*” section for further information). To Include a door lock into a Z-Wave network, perform the following:

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the “Automation” icon 2. At the Automation Screen, select “Tools”. 3. At the “Device Management” screen, select “Include Devices”. 4. The panel displays “Ready to include device. Press the function button on device”. Within one minute press the device’s Function button or activate in accordance with the manufacturer’s instructions. 5. If the module has been successfully enrolled, the panel displays “Device Found! Please Wait” and then the device information is displayed. 6. After successfully including a lock, the device’s information will be added to the top of the inclusion list. 7. To include next device press the “include” button. 8. Once you have finished including devices, press the “Home” key to return to the Dashboard screen or select the “⏪” button to return to the previous screen. 	<ul style="list-style-type: none"> • Program the 4-digits User Code in the control. When programming user codes into the panel, determine if the user code will have access to the Z-Wave lock. If so, the user code will be transferred to the lock. • Door lock devices may vary; follow the instructions provided with your specific door lock to Include properly and to program a new user code. • If locks will be associated with a Scene, the lock’s autolock feature must be disabled. • Due to Low Power Inclusion Mode of secure devices, Include the Z-Wave Lock first, if not using an Inclusion Tool/Remote Control. The lock should be installed before including other devices.

Home Automation

Z-Wave® Programming

Include/Add a Honeywell Thermostat

Install a Honeywell Thermostat according to the manufactures instructions. Device should be mounted in the final location and tested before adding it to the system. To Include a Honeywell Thermostat into a Z-Wave network, perform the following:

Note: Some thermostats do not update temperature status automatically (i.e., Wayne Dalton).

IMPORTANT: Honeywell is not responsible for property damages due to improper setting of the thermostat modes.

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the "Automation" icon. 2. At the Automation Screen" screen, select "Tools". 3. At the "Device Management" screen, select "Include Devices". 4. The panel displays "Ready to include device. Press the function button on device" Within one minute Include the Z-Wave thermostat. <ol style="list-style-type: none"> a. Press "System" on the ZW-STAT. b. Press and Hold the 4th (or center) button on the bottom row of the ZW-STAT. c. Press the first down arrow ▼ to change display to "rf10". d. Press the right (last) up arrow ▲ to Include the ZW-STAT. 5. Refer to the Installation Instructions provided with the thermostat for "Z-Wave inclusion". 6. To complete inclusion, press "Done". 7. Press "Done" on the thermostat to return to normal operation. 8. After successfully including a thermostat, the device's information will be added to the top of the inclusion list. 9. Once you have finished including devices, press the "Home" key to return to the Dashboard screen or select the "⏪" button to return to the previous screen. 	<ul style="list-style-type: none"> • If you are installing another brand of thermostat, follow the instructions provided with your specific device to Include properly. • When using Z-wave thermostat control on the LYNX Touch, the scheduling feature within thermostat should not be used. • When the HOLD button on the LYNX Touch Thermostat control screen is highlighted, Z-wave scenes driven by rules or schedules will not affect the thermostat operation. Additionally, if your system is connected to TotalConnect Service, the remote 7-day schedules will also not affect the thermostat operation. • For threshold monitoring to be configurable on the Total Connect Remote Services LYNX TOUCH Z-wave thermostat screen, the respective zones will first need to be assigned with a response type in zone programming. • You must program both Zones for each respective thermostat (i.e.; Zone 80 & 81 for thermostat #1, Zone 82 & 83 for thermostat #2 and Zone 84 & 85 for thermostat #3). • When temperature is represented in Celsius, the LYNX Touch matches the temperature increment of the particular thermostat for Heat, Emergency Heat and Cool set points. Depending on the thermostat it can be either half or one degree increments. • If Celsius scale is used in thermostat the LYNX Touch must also be set to Celsius scale.

Thermostat Energy Saving Mode

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the "Automation" icon. 2. At the Automation Screen" screen, select "Thermostats". 3. Select the desired Thermostat from the displayed list. 4. At the Thermostat control screen select the "Saving Off" button OR "Saving On" to activate or deactivate the thermostat's Energy Saving Schedule Function. 	<ul style="list-style-type: none"> • When temperature is represented in Celsius, the LYNX Touch matches the temperature increment of the particular thermostat for Heat, Emergency Heat and Cool set points. Depending on the thermostat it can be either half or one degree increments. • If Celsius scale is used in thermostat the LYNX Touch must also be set to Celsius scale. • An additional "Energy Saving" function in the Thermostat is used to set/unset the mode. • When the mode is set the LYNX Touch displays Energy Saving Heat/Cooling Setpoint Temperatures that are programmed at the Thermostat.

Honeywell Z-Wave Thermostat Functions

Button	Function
HOLD	Allows temporary override of the programmed rules and schedules from operating on the selected thermostat
NORMAL	Allows selected thermostat to run programmed schedules and rules.
NO SCHED	Prevents rules and schedules from operating on the selected thermostat
Saving Off/Saving On	Enables/disables the thermostat's Energy Saving Schedule Function.
EDIT	Used to edit Thermostat name.
BACK	Used to return to Thermostats screen

Edit and Delete Z-Wave® Devices

Edit Z-Wave Device Names

To Edit a device name, perform the following:

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the "Automation" icon. 2. At the Automation Screen, select the type of device that you wish to edit. (i.e.; Switches, Thermostats or Locks as applicable.) 3. Select the device that you wish to edit from the displayed list. 4. Select the edit button. 5. Enter the desired information (limited to 14 characters) on the displayed keypad and then select "Done". 6. The system returns to the previous screen. 7. Select "Back" to return to the Automation Screen or Press the "Home" key to return to the Dashboard screen. 	

Exclude/Delete a Z-Wave Device

To Exclude a Z-Wave device, perform the following:

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the "Automation" icon. 2. At the Automation Screen, select "Tools". 3. At the "Device Management" screen, select "Exclude Devices". 4. The panel displays "Ready to Exclude device. Press the function button on device". Within one minute press the device's Function button or activate the switch. 5. If the module has been successfully Excluded, the Excluded device's information will be added to the excluded list. If a device which is not known to the panel is excluded "Unknown Device Excluded" will be added to the excluded list. 6. Once you have finished excluding devices, press the "Home" key to return to the Dashboard screen or select the "⏪" button to return to the previous screen. 	<ul style="list-style-type: none"> • Excluding a device sends a command to the Node erasing any previous network information that was learned into it. • Previously deleted devices (but not Excluded) will still need to be Excluded before they can be re-Included into a controller.

Controlling Z-Wave® Devices

Turn On/Off All lights

To turn all lights On or Off, perform the following:

ACTION	NOTES
<ol style="list-style-type: none"> 1. At the Dashboard screen or Security Home Screen select the "Automation" icon. 2. At the Automation Screen, select "Tools". 3. At the "Device Management" screen, select "Advanced Tools". 4. Enter the Master User Code on the displayed keypad. 5. To turn all lights On, select "All Devices On" OR to turn all lights Off, select "All Devices Off". 6. Press the "Home" key to return to the Dashboard screen or select the "⏪" button to return to the previous screen. 	<ul style="list-style-type: none"> • If All Devices On is selected, some thermo-stats will exit Setback mode. • If All Devices Off is selected, some thermo-stats will enter Setback mode.


Home Automation

Z-Wave® Programming


Z-Wave® Operation

Scenes are used to control a single or group of devices together, turning them OFF, ON, ON to a preset lighting level, temperature or mode, or lock/unlocked. The LYNX Touch has 20 Scenes which may each be configured with up to 10 devices each. Scenes can be manually activated or activated by a Schedule or Rule. Schedules and Rules are used to control Scenes by pre-set “Conditions” and “Triggers”. Up to 20 Rules may be programmed locally into the LYNX Touch. To program Scenes, Schedules and Rules, refer to applicable section in this guide. Devices can also be activated manually. To control devices manually, perform the following:


ACTION	NOTES
<ol style="list-style-type: none"> At the Dashboard or Security Home Screen select the “Automation” icon. At the Automation Screen, select the type of device that you wish to edit. (i.e.; Switches, Thermostats or Locks as applicable.) Select the device that you wish to control from the displayed list. Refer to the figures below for typical examples of the features that can be controlled manually for the devices. 	<ul style="list-style-type: none"> The control screens vary according to the features of the specific Z-Wave device that is Included. The features and functions that can be controlled vary by manufacturer and you will need to review the user manual that was provided to determine capabilities of each device.

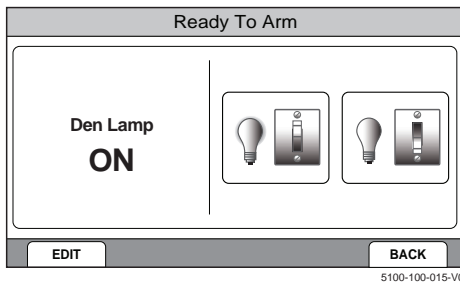


Light Control Screen (Without Dimming Support)

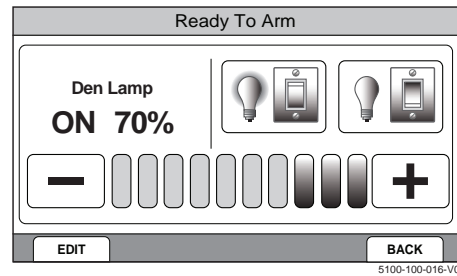


Light Control Screen (With Dimming Support)

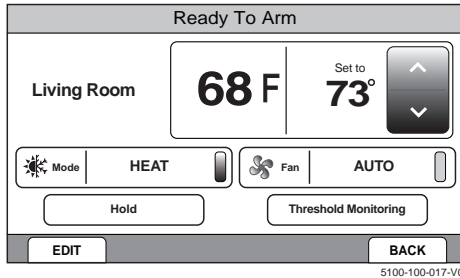


Thermostat Control Screen

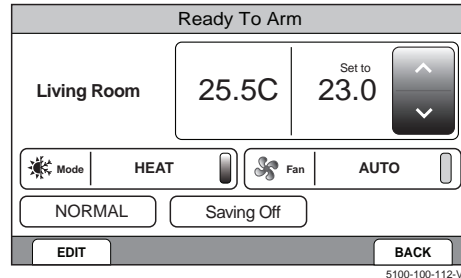


Thermostat Energy Savings Control Screen

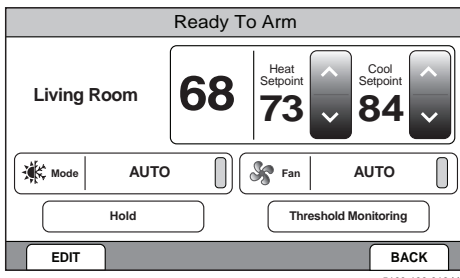

Dual Setback Thermostat Control Screen

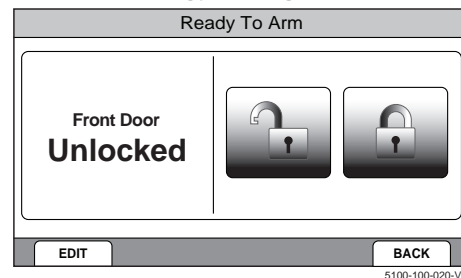

Lock Control Screen

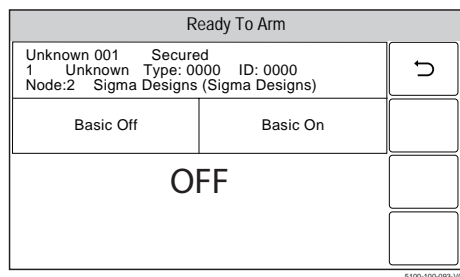


Unsupported Device Control Screen


General Information

Scenes are used to control a single or group of devices together, turning them OFF, ON, ON to a preset lighting level, temperature or mode, or lock/unlocked. The LYNX Touch has 20 Scenes which may each be configured with up to 10 devices each. Scenes can be manually activated or activated by a Rule or a Scheduled event. Rules and Schedules are used to control Scenes by pre-set “Conditions” and “Triggers”. Up to 20 Rules may be programmed locally into the LYNX Touch.


Programming a Scene

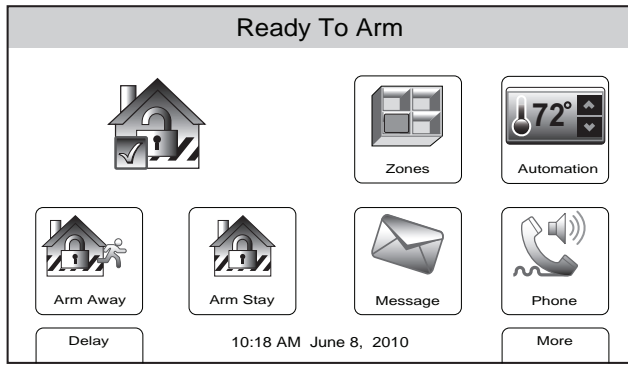

1. With the system in the disarmed state, select the “Automation” icon from the Home Screen. The system displays the Keypad screen.

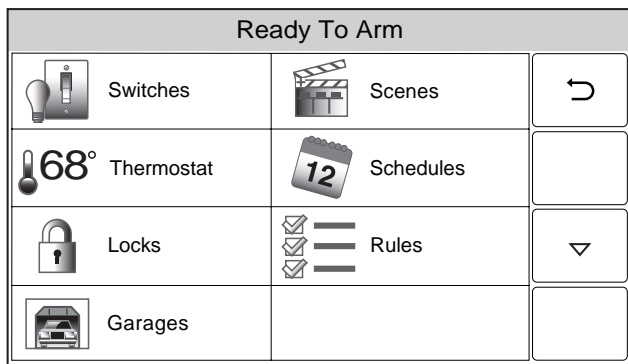



2. Select the “Scenes” icon. The system displays the Scenes screen.

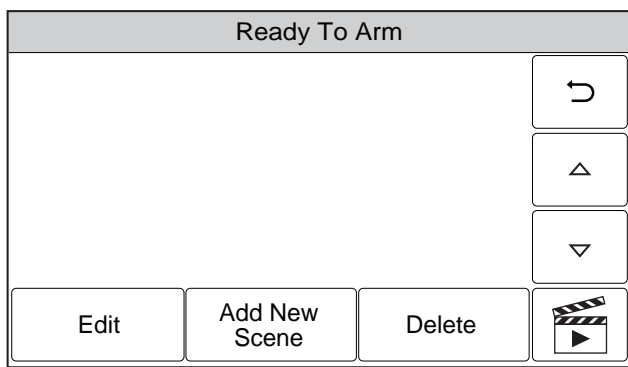

3. Select “Add New Scene”. The system displays a keypad along with the next available Scene number.
4. If desired, select clear then enter a name (up to 13 digits long) for the scene on the displayed keypad then select “Done”.

Home Automation

Scenes

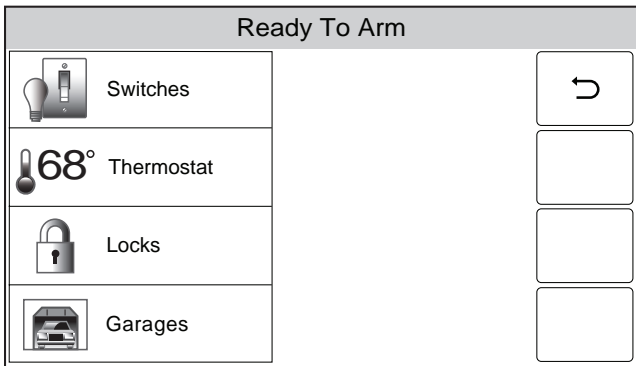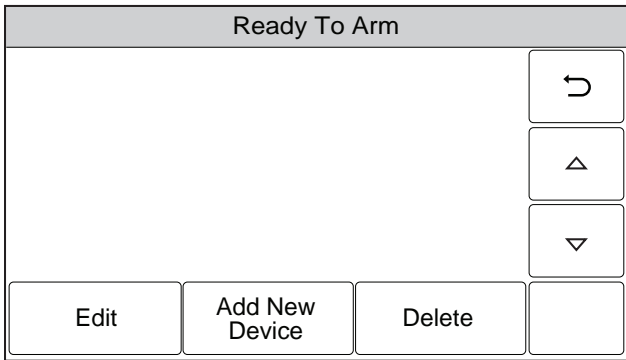

5. Select the “Add New Device” button. The system displays the available Z-Wave device types.

6. Select one of the following options:

- Switches
- Thermostats
- Locks
- Garages

7. Select the desired device type, then select the applicable device from the list of installed devices. The device’s operational screen is displayed. Up to 10 devices may be associated with a scene.

8. Set the desired options. Typical operations are shown below:

Switches/Outlets

Set Switch/Outlet On

Set Switch/Outlet Off

Dim Switch

Thermostats

Set Temperature Mode (Heat, Cool, Off)

Set Fan Mode (Auto, On, Circulate)

Select Hold Mode (Temperature hold)

Setback

Select Energy Saving Mode

Note: If Schedules/Scenes feature will be used to control the thermostat set points, do not use the daily schedules in the thermostat itself.

Locks


Lock

Unlock


Note: For compatibility, do not include a door lock as part of a scene that has auto-lock enabled. Auto-lock may be disabled. For details, please refer to the documentation provided with the lock.

9. Select Save when complete. The system returns to the Z-Wave device screen. Select the “↶” button as required to return to the Automation programming screen or the Home or Dashboard screen.


Editing/Deleting a Scene

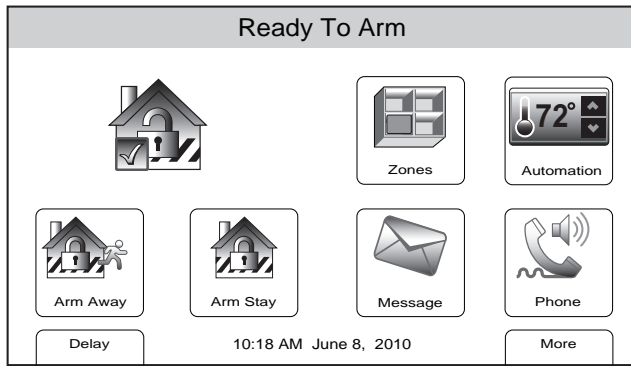

1. With the system in the disarmed state, select the "Automation" icon from the Home Screen. The system displays the Keypad screen.

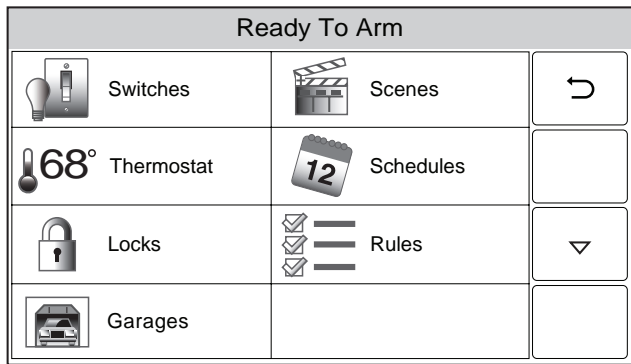

2. Select the "Scenes" button. The system displays the Scenes screen.

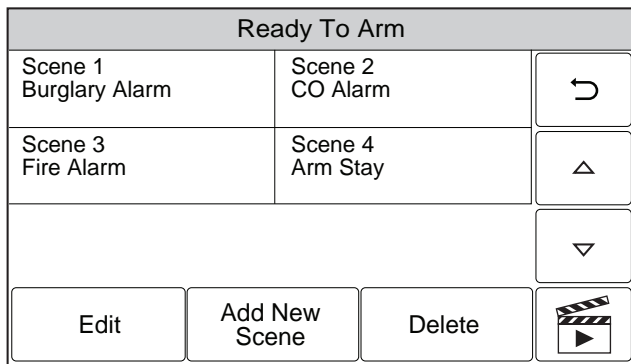


3. Select the scene you wish to edit or delete.
4. Select the "Edit" or "Delete" button.
5. If "Edit" was selected, the system advances to the Scene. Edit as required and proceed to step 6. If delete was selected proceed to step 7.
6. Select Save when complete. The system returns to the Z-Wave device screen. Select the "↶" button as required to return to the Automation programming screen or the Home or Dashboard screen.
7. The system displays a confirmation screen and then returns to the previous screen. Select the "↶" button as required to return to the Automation programming screen or the Home or Dashboard screen.


Home Automation

Scenes


Running a Scene

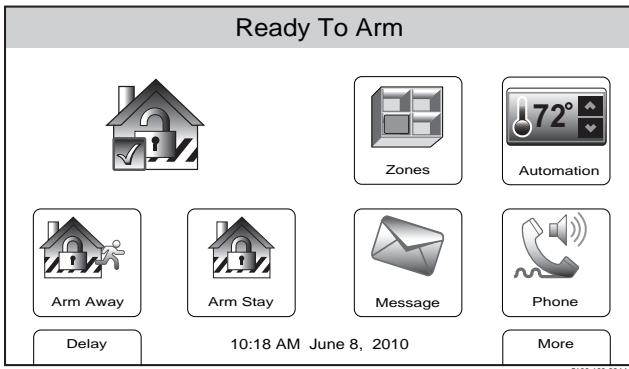

1. With the system in the disarmed state, select the "Automation" icon from the Home Screen. The system displays the Keypad screen.

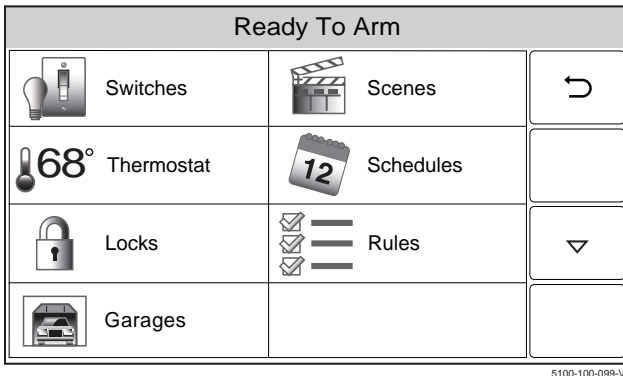

2. Select the "Scenes" icon. The system displays the Scenes screen.

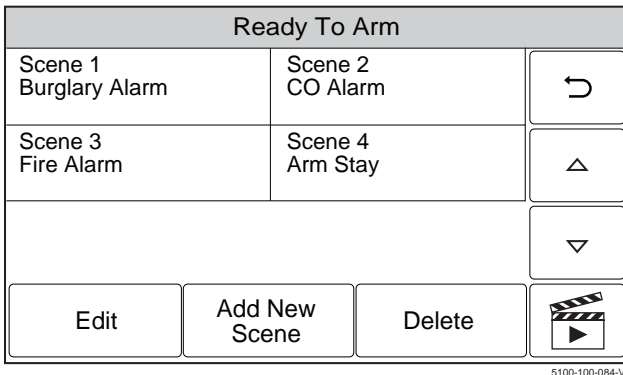


3. Select the scene you wish to run.
4. Select the "Scenes" button to run the scene.


General Information

The Schedules Feature can be used to program the system to automatically perform certain functions (i.e.; automatically arming the system in Stay mode and activating output [Z-Wave] devices) at a scheduled time, day of the week or month, as applicable.

Programming a Scheduled Function

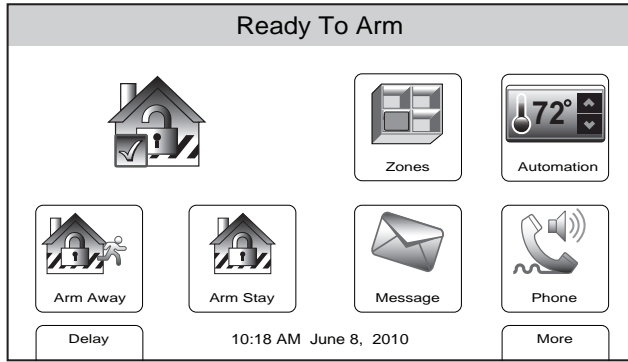

1. With the system in the disarmed state, select the "Automation" icon from the Home Screen. The system displays the Keypad screen.

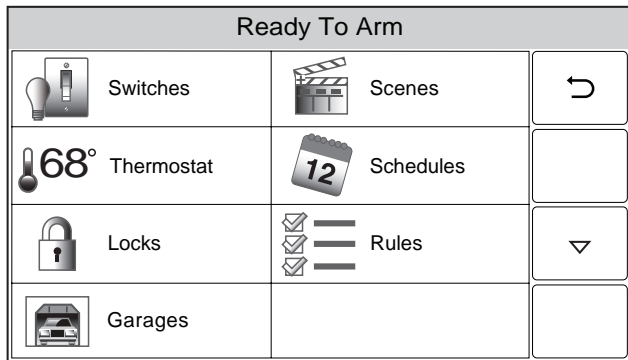


2. Select the "Schedules" icon. The system displays the Scheduling screen.

Note: Rules 21-40 are only accessible through TotalConnect Service.



3. Select "Add New". The system displays the scheduling options screen.

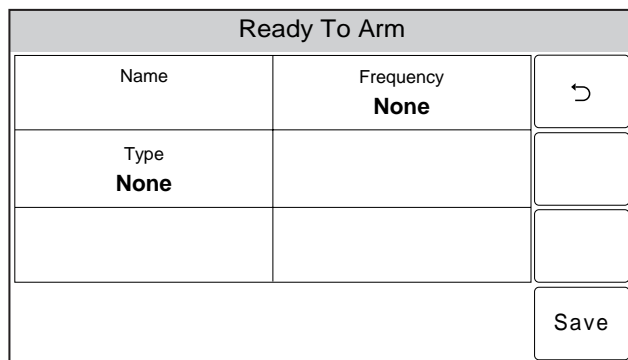

4. Select "Name". The system displays a keypad.

Home Automation

Schedules

Ready To Arm												
123!@#		User3							↶			
Q	W	E	R	T	Y	U	I	O	P			
A	S	D	F	G	H	J	K	L				
Clear	Z	X	C	V	B	N	M	←				
abc...									Done			

5000-100-081-V0

5. Enter a name (up to 13 digits long) for the scheduled function on the displayed keypad then select "Done".
6. Select "Frequency" then select one of the following displayed options:
None Once
Daily Weekday
Weekly Monthly
7. Program the following options based upon the Frequency selected in step 6:
Once Date
Daily
Weekday Start Time
Weekly Day of the Week
Monthly Day of the Month
8. Select "Type" then scroll through and select one of the following options:
None
Auto Stay
Rules
Disarm Notification
Scene (displayed when Z-Wave has been enabled)

Ready To Arm				
Enter Time 10:21 AM AM / PM	1	2	3	↶
	4	5	6	▲
	7	8	9	▼
	Clear	0	←	Done

5000-100-147-V0

9. If Auto Stay is selected, select "Clear" then enter a 4-digit time on the displayed keypad then select "Save". If "Rules" is selected proceed to Step 11. If "Disarm Notification" is selected proceed to Step 12.
10. Select "Rules" OR "Scenes" then select a Rule or Scene from the displayed list (Rules 1 through Rules 20).
11. Enter a Start Time and End Time on the displayed keypad then select "Save".
12. Select the "↶" button. The system returns to the Automation programming screen.

Editing a Scheduled Function

Ready To Arm		
Schedule 1	Auto Arm	↶
Auto Stay	Daily	
		▲
		▼
Edit	Add New	Delete

5100-100-081-V0

1. At the Schedules screen, select the Schedule you wish to edit.
Note: Rules 21-40 are only accessible through TotalConnect Service.
2. Select the "Edit" button. The Schedule programming screen will appear. Follow the steps as noted above in the programming a Scheduled Function section to edit and save your changes.

Deleting a Scheduled Function

Ready To Arm	
Schedule 1 Auto Stay	Auto Arm Daily
↶	
▲	
▼	
Edit	Add New
Delete	

5100-100-081-V0

1. At the Schedules screen, select the Schedule you wish to delete.

Note: Rules 21-40 are only accessible through TotalConnect Service.

2. Select the "Delete" button. A confirmation screen will be displayed. Select "Yes" to confirm the deletion.
3. Select the "↶" button. The system returns to the Automation programming screen.

Rules

General Information

Up to 40 rules can be programmed. Rules 1 through 20 are used for Triggers, Z-Wave Scenes and Follow-Me Messages. Rules 21 through 40 are used for Z-Wave Scenes and for E-mail notification and are only accessible through TotalConnect Service. Check with your Installer to see which options are available to you.

The following options are programmed in this section:


Programming Field	Action
Rule 1 - 20:	Select Rule 1 -20 Note: Rules 21-40 are only accessible through TotalConnect Service.
Name:	Name the device
Type:	Select the output type
Action:	Select the action required for the device
Start Zone Type: OR Zone Type Fault:	Select Zone Type to start event*
Stop Zone Type: OR Zone Type Restore:	Select Zone Type to stop event*
Start System Operation: OR System Operation 1:	Select System Operation to start event*
Stop System Operation: OR System Operation 1	Select System Operation to stop event*
Zone Number Operation:	Select Zone Number to trigger event upon fault, trouble or alarm as selected.

* The displayed field is dependent upon the Type selection.


Home Automation

Rules


Programming Rules

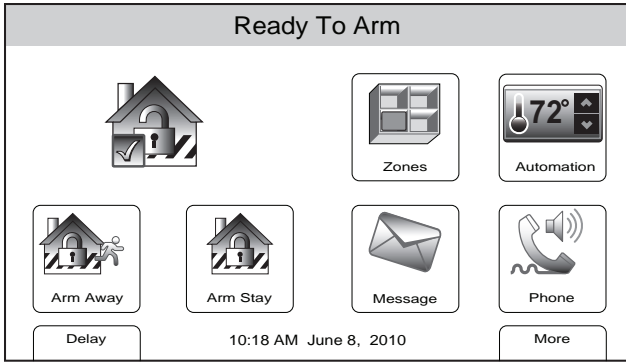

1. With the system in the disarmed state, select the "Automation" icon from the Home Screen. The system displays the Keypad screen.

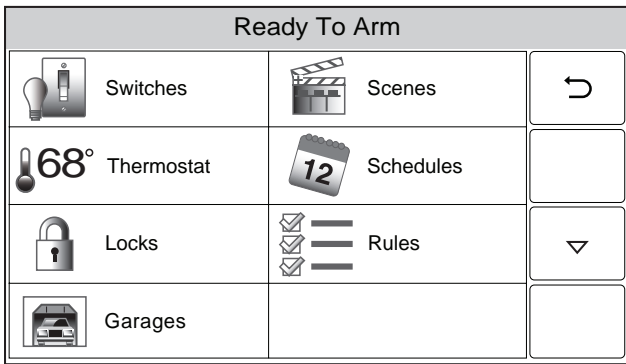


2. Select the "Rules" button. The system displays the Rules screen.

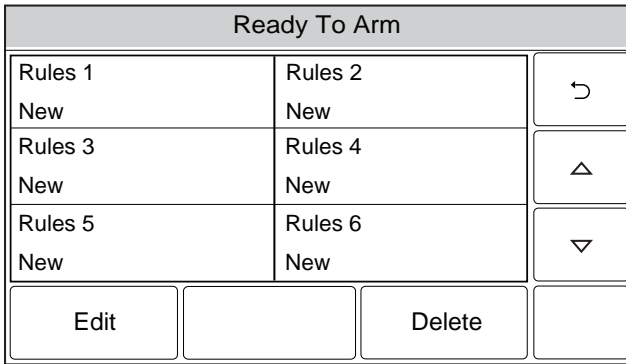

3. Select a "Rules" key followed by the Edit button. The system displays a keyboard.

Note: Rules 21-40 are only accessible through TotalConnect Service.

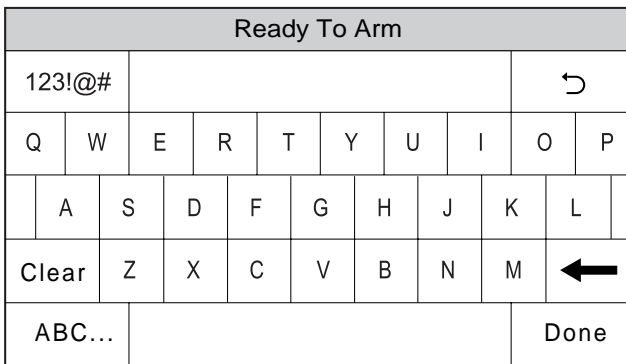

4. If desired you can enter a Rule Name. Select the "Clear" key and then enter up to 13 characters of text.

Note: Select the "ABC..." key to switch the keyboard between upper/lower case or the "123!@#" key to switch to numbers.

5. Once you are finished, select "Done". The system returns to the Rules screen.

Ready To Arm		
Name	01	
Type	Disabled	
		Save

5000-100-188-V0

Ready To Arm		
Name	01	
Type	Action	
Trigger Output	None	
Start Zone Type	Stop Zone Type	
Not Used	Not Used	
Start System Operation	Stop System Operation	
Not Used	Not Used	Save

5000-100-189-V0

OR

Ready To Arm		
Name	Scene	
Type	Action	
Scene	None	
Zone Type Fault	Zone Type Restore	
Not Used	Not Used	
System Operation 1	System Operation 2	
Not Used	Not Used	Save

5100-100-071-V0

6. Select the "Type" button. Dependant upon what features are programmed in your control the system toggles between the following Types:
 Disabled
 Trigger Output
 Scene (displayed when Z-Wave has been enabled)
 To Ph. 1 (Message to Phone 1)
 To Ph. 2 (Message to Phone 2)
 To Ph. 1 & 2 (Message to Phone 1 & 2)
 Email 1

Depending upon the Type selected, the system displays several new programming fields. If Scene is selected, you must program a scene in order for it to run.

7. Select "Action". Dependent upon the Type selected previously, the system scrolls between several options:
 None
 Permanent On
 On for 2 sec
 Pulsing
 Send
 Run Scene*

* If Scene was selected in step 6, you must select Run Scene.

8. Select "Start Zone Type" OR "Zone Type Fault" (if Scene was selected in the Type field). The system displays the following options (dependent upon the Type that was selected):

Not Used	Entry Exit 1
Entry Exit 2	Perimeter
Interior Follower	Day / Night
24 Hour Silent	24 Hour Audible

Use the "▲" "▼" buttons to scroll to second page of zone type options.

Silent Burglary	24 Hour Auxiliary
Interior With Delay	Fire No Verification
Carbon Monoxide	Trouble
No Response	Arm Stay

Use the "▲" "▼" buttons to scroll to third page of zone type options.

Arm Away	Disarm
Monitor	Resident Monitor
Resident Response	General Monitor
General Response	Garage Door

Home Automation

Rules

Ready To Arm		
Name	01	↶
Type	Action	
Trigger Output	None	
Start Zone Type	Stop Zone Type	▼
Not Used	Not Used	
Start System Operation	Stop System Operation	Save
Not Used	Not Used	

5000-100-189-V0

OR

Ready To Arm		
Name	Scene	↶
Type	Action	
Scene	None	
Zone Type Fault	Zone Type Restore	▼
Not Used	Not Used	
System Operation 1	System Operation 2	Save
Not Used	Not Used	

5100-100-071-V0

Ready To Arm		
Zone Number Operation		↶
Not Used		
		▲
		Save

5000-100-191-V0

Ready To Arm		
Zone Number Operation		↶
Fault		
First Start Zone	First Stop Zone	▲
Disabled	Disabled	
Second Start Zone	Second Stop Zone	
Disabled	Disabled	
Third Start Zone	Third Stop Zone	Save
Disabled	Disabled	

5000-100-192-V0

9. Select "Stop Zone Type" OR "Zone Type Restore" (if Scene was selected in the Type field). The system displays the same options as the previous step.

Note: If a Rule is being used to trigger a Z-Wave door lock, when the system is Armed Stay or Armed Away, it is recommended that "End of Exit Delay" be selected for System Operation 1 or System Operation 2.

10. Select "Start System Operation" OR "System Operation 1" (if Scene was selected in the Type field). The system displays the following options (dependent upon the Type that was selected):

Not Used	Arm Stay
Arm Away	Disarm
Any Burglary Alarm	Any Fire Alarm
Bell Timeout	End of Exit Delay

- Use the "▲" "▼" buttons to scroll to second page of zone type options.

Start of Entry Delay	Chime
Kissoff	Bypass
System Low Battery	Reporter Failure
Duress Alarm	

11. Select "Stop System Operation" OR "System Operation 2" (if Scene was selected in the Type field).. The system displays the same options as step 10.

12. Select "Zone Number Operation". The system toggles between the following options:

Not Used
Fault
Trouble
Alarm

Notes: 1. For Fault, the following zone types should not be used: General Monitor, General Response, Resident Monitor, and Resident Response.

2. When a zone has been deleted, please verify the programming selection for Zone Number Operation.

If Trouble, Fault or Alarm is selected, the system displays several new options. Proceed to Step 13.

13. Select the First, Second or Third "Start Zone" Select the Zone from the list displayed by the system.

14. Select the First, Second or Third "Stop Zone" Select the Zone from the list displayed by the system.

15. Select "Save" when programming is complete.

16. Select the "↶" button. The system returns to the Automation programming screen.

Editing or Deleting Rules

Ready To Arm			
Device 1 System Armed Follow Me	Device 2 New		↶
Device 3 New	Device 4 New		⬆
Device 5 New	Device 6 New		⬇
Edit			Delete

5000-100-194-V0

Ready To Arm			
Name System Armed	01		↶
Type Message to phone 1	Action Send		
Start Zone Type Not Used	Stop Zone Type Not Used		⬇
Start System Operation Armed Stay	Stop System Operation Disarm		Save

5000-100-195-V0

1. At the Rules Programming Screen, select the Rule that you wish to edit or delete.

Note: Rules 21-40 are only accessible through TotalConnect Service.

2. To delete the rule, select the Delete button. To edit the rule select the Edit button and proceed to step 3.

3. Select the field that you wish to edit and follow the steps as outlined in the Programming Rules procedure.

Home Automation

Garage Door Opener Operation

General Information


If your system has been equipped with a 5877 Relay Receiver and 5822T Tilt Sensor or Door/Window Transmitter (i.e.; 5616), it can be used to remotely operate and/or view the status of up to three Garage Doors. The System can be armed when the garage door is open, and once the garage door has been closed, the zone will be monitored as part of the system without providing burglary protection. It can also be programmed for monitoring only. The panel includes the option to automatically close the Garage Door(s) if it has been left open for more than a specified (programmable) period time or at a specified time.

Enrolling the 5877 Relay Receiver



ACTION	NOTES
<p>Note: Ensure that the 5877 Relay Receiver is in close proximity to the LYNX Touch while it is being enrolled. After the device has been enrolled it can be mounted in its permanent position but should be tested to make sure that it receives the Open/Close signals from the LYNX Touch.</p> <ol style="list-style-type: none"> At the Dashboard screen select the "Automation" icon. At the second page of the Automation Screen, select the Garage door setup icon. Select the Garage door to be enrolled, from the displayed list. Select "Assign device". The control advances to the Garage Door operation screen. Enter the 7-digit serial number associated with the 5877 Relay Receiver then select "Done". To confirm enrollment, at the LYNX Touch select the "Learn" button and listen for a click at the relay. Select the "↵" button to return to the Automation screen. 	<ul style="list-style-type: none"> If System Status is desired, a House ID must be enrolled in the LYNX Touch. Refer to the System Type Programming Section of the LYNX Touch Installation and Setup Guide P/N 800-10614V1 (or higher) or to the LYNX Touch Programming Guide P/N 800-13468 (or higher) OR 800-11060V1 (or higher) (Canada). The 5877 Relay Receiver should be enrolled in the LYNX Touch before it is permanently mounted. In order to display the garage door status, you must also enroll a 5816 sensor or a 5822T Tilt Sensor. Refer to the Zone Programming Section of the LYNX Touch Installation and Setup Guide P/N 800-10614V1 (or higher) or to the LYNX Touch Programming Guide P/N 800-13468 (or higher) OR 800-11060V1 (or higher) (Canada). The 5816 or 5822T is enrolled on Zones 46, 47 or 48 (which are reserved for the Garage Door operation) as Loop 3.

Garage Door Feature Operation

ACTION	NOTES
<ol style="list-style-type: none"> At the Dashboard screen select the "Automation" icon. At the Automation Screen, select the Garages icon. Select the Garage door that you wish to control/program from the displayed list. The control advances to the Garage Door operation screen. Refer to the procedures below for additional operation/programming information. 	<ul style="list-style-type: none"> The Garage Zone and Response Type must be assigned to in order to view garage door status. The Switches button on the Garage Door Setup screen is used to assign a Z-Wave Binary Garage Door Opener. The RF Openers on the Garage Door Setup screen is used to assign RF Garage Door Openers.

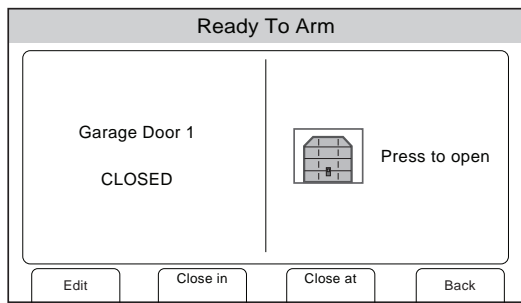

Garage Door Operation Screen

Button or Icon	Function
Edit	Used to modify description of Garage Door
Close in	Provides access to keypad used to set a specific period of time (up to 12 hours and 59 minutes) before an open garage door closes automatically. If programmed the time will also be displayed.
Close at	Provides access to keypad used to set a specific time that an open garage door closes automatically. If programmed the time will also be displayed.
Back	Used to return the control to the Garage Door list.
 Press to open	Indicates Garage Door is Closed. Used to Open Garage Door.
 Press to close	Indicates Garage Door is Open. Used to Close Garage Door.

Operate Garage Door from LYNX Touch Control Panel

ACTION	NOTES
<ol style="list-style-type: none">1. At the Garage Door operation screen, select the Opened or Closed Garage Door icon to Close or Open the door.2. When the door position has changed the icon will switch from Opened to Closed, as applicable, and CLOSED or OPENED is displayed.	<ul style="list-style-type: none">• When the garage door is open, "Ready to Arm – Fault" is displayed in a yellow band at the top of the display.• If a "Close in" or "Close at" time has been programmed, the garage door will always operate as programmed until the selection has been cleared.

Home Automation

Advanced Z-Wave Operations

View Enrolled Z-Wave Devices or Controllers

To View a list of the enrolled devices perform the following:

ACTION	NOTES
<ol style="list-style-type: none">1. At the Dashboard screen or Security Home Screen select the "Automation" icon.2. At the Automation Screen, select "Tools".3. At the "Device Management" screen, select "Advanced Tools".4. Enter the Master User Code on the displayed keypad.5. At the Advanced Tools Screen, select "View Enrolled Devices" OR "View Enrolled Controllers".6. Use the down ▼ arrow to scroll to the next page of options. Use the ▲ arrow to return to the previous page.7. Press the "Home" key to return to the Dashboard screen or select the "↶" button to return to the previous screen.	

Remove/Delete All Z-Wave® Devices (Reset Controller)

To Remove all Z-Wave devices, perform the following:

ACTION	NOTES
<ol style="list-style-type: none">1. At the Dashboard screen or Security Home Screen select the "Automation" icon.2. At the Automation Screen, select "Tools".3. At the "Device Management" screen, select "Advanced Tools".4. Enter the Master User Code on the displayed keypad.5. Select "Reset Controller".6. The panel displays "This will delete all nodes and generate a new home ID".7. Select "Yes". The panel displays "All nodes deleted and new home ID generated".8. Select "OK". The system returns to the previous screen.	<ul style="list-style-type: none">• Resetting the Controller does not Exclude the devices individually; therefore, each device will need to be Excluded before being Included into a controller.

Shift Primary Control

After all Z-Wave devices have been Included into the Primary Controller, control can be shifted to a Secondary Controller. To shift primary control to the secondary Z-Wave controller, perform the following:

ACTION	NOTES
<ol style="list-style-type: none">1. At the Dashboard screen or Security Home Screen select the "Automation" icon.2. At the Automation Screen, select "Tools".3. At the "Device Management" screen, select "Advanced Tools".4. Enter the Master User Code on the displayed keypad.5. Select "Pri. Controller Shift to Secondary".6. The panel displays "Shifting".7. Put the controller you are shifting to in "learn" mode. Refer to the documentation provided with the controller for additional information.	

Failed Devices (Nodes)

If a Z-Wave device is not plugged into an AC outlet and the user attempts to control it, the LYNX Touch will recognize it as a Failed device and the Z-Wave Device Failed icon will be displayed on the Home Screen. The LYNX Touch will take up to a minute to detect a failed device after and attempt has been made by the User or Scene to control the device. It may take an additional minute for the failed device to be displayed.

ACTION	NOTES
<ol style="list-style-type: none">1. At the Dashboard screen or Security Home Screen select the "Automation" icon.2. At the Automation Screen, select "Press to see Failed devices".3. Select OK when "Failed Devices Found!" is displayed. At the "Device Management" screen, select "Advanced Tools".4. Ensure that the module has electrical power. If the device is defective, or not available for any reason, select the "Fix All" button.5. A confirmation screen displays "This will delete all failed devices." Select the "Yes" button. The affected device will be deleted.	<ul style="list-style-type: none">• The LYNX Touch will take up to a minute to detect a failed device after and attempt has been made by the User or Scene to control the device. It may take an additional minute for the failed device to be displayed.

Controller	The Primary Controller is the main device used to set up and control your Z-Wave network. There can only be one primary controller and it must be used to add or delete devices. A primary controller can be a portable device like a hand-held remote, a static controller (permanently installed and never moved), a Z-wave enabled PC or a Z-Wave enabled Ethernet router/bridge. A Secondary controller can not be used to add or delete devices. If the secondary controller is the same brand and model as the primary, it will have all of the same capabilities as the primary but can not be used to add or delete devices.
Event	An event is something you want to happen at a specific time and day. This could be every day, a specific day of the week, Monday through Friday, Saturday and Sunday only, or a one time occurrence. Events can be set up to control an individual device, a group or a scene.
Exclude	When a device is excluded, it is removed from the LYNX Touch system. Excluding the device also removes the network pairing from the device's memory.
Important Note:	A device must be excluded before it can be moved to another network or re-included after a controller reset.
Include	Including a device pairs it with the LYNX Touch so that the two can communicate. It is also referred to as Adding.
Node	Node is the technical term used to describe a Z-Wave device in your home control network. Please note that the terms "Node", "Device" and "Light" all refer to an individual Z-Wave enabled device and are interchangeable within the context of these instructions.
Rules	Rules are used to automatically perform specified functions in response to certain events, which trigger scenes.
Scene	A scene lets you control multiple functions automatically. For example you can establish preset brightness levels for multiple Z-wave controlled lights and then control them with one command. This is ideal for mood or task lighting. Scene 1 could be the family room lights set to dim for watching TV. Scene 2 could have the same lights set to a different brightness level for other activities like reading or entertaining.
Schedules	The Schedules Feature can be used to program the system to automatically perform certain functions (i.e.; automatically arming the system in Stay mode and activating output [Z-Wave] devices) via Scenes.

Z-Wave Compatibility

Z-Wave devices may vary; follow the instructions provided with the specific device when including and excluding devices into the Z-Wave network. Refer to the list to view the compatible devices.

Note: Not all Z-wave devices have been tested and some features may produce unpredictable results.

Door Locks
Yale Real Living Push Button Lever Lock
Yale Real Living Touchscreen Lever Lock
Yale Real Living Push Button Deadbolt Lock
Yale Real Living Touchscreen Deadbolt Lock
Schlage Link Deadbolt Lock
Schlage Link Lever Lock
Kwikset Smartcode Lever lock
Kwikset Smartcode Deadbolt Lock
Thermostats
Honeywell ECC
Wayne Dalton Zwave Thermostat
Trane Zwave Thermostat
Residential Control Systems Thermostat (Model TZ45)
Intermatic InTouch Thermostat (Model CA8900)

Appliance
HomeManageable Appliance Module
Wayne Dalton Small Appliance Module
GE Wireless Lighting Control Plug In Appliance Module
SOMFY
Cooper In-Wall Duplex Receptacle Module (Model RF9505-TDS)
Lights
Leviton/ViziaRF+ switches
Leviton/ViziaRF+ dimmers
Leviton/ViziaRF+ plug in modules
GE wireless lighting control dimmers
GE wireless lighting control Switches
GE wireless lighting control plug in lamp modules
Intermatic In-Wall Receptacle (Model HA01)
Cooper Plug-in Lighting Switch Module (Model RFAPM)
AEON Labs Lamp/Dimmer Module (Model DSC06106-ZWUS)
Remotec Lamp Dimmer Module (Model ZDS-100US)

Home Automation

Important Notes

Wireless Range

This device complies with the Z-Wave® standard of open-air, line of sight transmission distances of 100 feet. Actual performance in a home depends on the number of walls between the controller and the destination device, the type of construction and the number of Z-Wave enabled devices installed in the control network.

Please Note: Z-Wave home control networks are designed to work properly alongside wireless security sensors, Wi-Fi, Bluetooth and other wireless devices. Some 900MHz wireless devices such as baby cams, wireless video devices and older cordless phones may cause interference and limit Z-Wave functionality.

Things to consider regarding RF range:

- Each wall or obstacle (such as refrigerator, big screen TV, etc.) between the remote and the destination device will reduce the maximum range of 100 feet by approximately 25-30%.
- Brick, tile or concrete walls block more of the RF signal than walls made of wooden studs and drywall.
- Wall mounted Z-Wave devices installed in metal junction boxes will suffer a significant loss of range (approximately 20%) since the metal box blocks a large part of the RF signal.

WARNING: NOT FOR USE WITH MEDICAL OR LIFE SUPPORT EQUIPMENT!

Z-Wave enabled devices should never be used to supply power to, or control the On/Off status of medical and /or life support equipment.

Additional Z-Wave Information

1. Once the system has reached node number 232, the system will not allow devices to be enrolled. Reset Controller needs to be performed to allow the system to enroll Z-wave devices. The node numbers can be viewed by selecting Automation Tools > Advanced Tools > View Enrolled Devices.
2. The system is not aware of door locks being enabled with any temporary user shutdown feature such as Vacation Mode. The system will continue to unlock a door if programmed to do so via Rules, Schedules and Scenes.
3. Certain door lock models with thumbturns will provide a brief time window for you to turn the thumbturn before they automatically lock on their own. These types of door locks are not recommended for use in conjunction with Z-Wave rules, schedules, and scenes.



Z-Wave devices are identified by the Z-Wave logo and can be purchased from your local retailer.

Z-Wave is a registered trademark Sigma Designs, Inc. and/or its subsidiaries.

Honeywell

2 Corporate Center Drive, Suite 100

P.O. Box 9040, Melville, NY 11747

Copyright © 2012 Honeywell International Inc.

www.honeywell.com/security



800-11309V1 12/12 Rev. A